

GB **Dual fuel gas oil/gas burners**

Progressive two-stage or modulating operation



RLS

| CODE | MODEL | TYPE |
|----------|----------------|--------|
| 20057525 | RLS 1000/M C13 | 1311 T |
| 20053012 | RLS 1200/M C13 | 1312 T |



Translation of the original instructions

| | | |
|----------|---|-----------|
| 1 | Declarations | 3 |
| 2 | Information and general warnings | 4 |
| 2.1 | Information about the instruction manual | 4 |
| 2.1.1 | Introduction | 4 |
| 2.1.2 | General dangers | 4 |
| 2.1.3 | Other symbols | 4 |
| 2.1.4 | Delivery of the system and the instruction manual | 5 |
| 2.2 | Guarantee and responsibility | 5 |
| 3 | Safety and prevention | 6 |
| 3.1 | Introduction | 6 |
| 3.2 | Personnel training | 6 |
| 4 | Technical description of the burner | 7 |
| 4.1 | Burner designation | 7 |
| 4.2 | Models available | 7 |
| 4.3 | Burner categories - Countries of destination | 7 |
| 4.4 | Technical data | 8 |
| 4.5 | Electrical data | 8 |
| 4.6 | Maximum dimensions | 9 |
| 4.7 | Firing rates | 10 |
| 4.8 | Test boiler | 10 |
| 4.9 | Burner description | 11 |
| 4.10 | Electrical panel description | 12 |
| 4.11 | Burner equipment | 12 |
| 4.12 | Control box (LFL1.333..) | 13 |
| 4.13 | Servomotor (SQM10.1....) | 14 |
| 5 | Installation | 15 |
| 5.1 | Notes on safety for the installation | 15 |
| 5.2 | Handling | 15 |
| 5.3 | Preliminary checks | 15 |
| 5.4 | Operating position | 16 |
| 5.5 | Removing the shutter lockout screws | 16 |
| 5.6 | Preparing the boiler | 16 |
| 5.6.1 | Boring the boiler plate | 16 |
| 5.6.2 | Blast tube length | 16 |
| 5.7 | Securing the burner to the boiler | 17 |
| 5.8 | Access to head internal part | 17 |
| 5.9 | Electrode position | 17 |
| 5.10 | Nozzle installation | 18 |
| 5.10.1 | Recommended nozzle | 18 |
| 5.11 | Combustion head adjustment | 19 |
| 5.12 | Light oil supply | 20 |
| 5.12.1 | Double-pipe circuit | 20 |
| 5.12.2 | The loop circuit | 20 |
| 5.12.3 | Hydraulic connections | 21 |
| 5.12.4 | Hydraulic circuit diagram | 21 |
| 5.12.5 | Pressure variator | 21 |
| 5.13 | Pump | 22 |
| 5.13.1 | Technical data | 22 |
| 5.13.2 | Priming pump | 22 |
| 5.14 | Gas feeding | 23 |
| 5.14.1 | Gas feeding line | 23 |
| 5.14.2 | Gas train | 24 |
| 5.14.3 | Gas train installation | 24 |

| | | |
|----------|--|-----------|
| 5.14.4 | Gas pressure | 24 |
| 5.14.5 | Pilot - gas train connection..... | 25 |
| 5.14.6 | Ignition pilot burner | 25 |
| 5.15 | Activation of the burner lance | 26 |
| 5.16 | Electrical wiring | 27 |
| 5.16.1 | Supply cables and external connections passage | 27 |
| 5.17 | Calibration of the thermal relay | 28 |
| 6 | Start-up, calibration and operation of the burner | 29 |
| 6.1 | Notes on safety for the first start-up | 29 |
| 6.2 | Adjustments prior to ignition (light oil) | 29 |
| 6.2.1 | Nozzle | 29 |
| 6.2.2 | Combustion head..... | 29 |
| 6.2.3 | Pump pressure..... | 29 |
| 6.2.4 | Fan damper..... | 29 |
| 6.3 | Burner ignition (light oil) | 29 |
| 6.4 | Adjustments prior to ignition (gas) | 30 |
| 6.5 | Burner start-up (gas)..... | 30 |
| 6.6 | Burner ignition..... | 30 |
| 6.7 | Change of fuel..... | 30 |
| 6.8 | Servomotor adjustment..... | 31 |
| 6.9 | Combustion air adjustment | 31 |
| 6.10 | Burner adjustment and output modulation | 32 |
| 6.10.1 | Maximum output | 32 |
| 6.10.2 | Minimum output | 32 |
| 6.10.3 | Intermediate outputs | 32 |
| 6.11 | Air / fuel adjustment | 32 |
| 6.11.1 | Burner calibration procedure..... | 33 |
| 6.12 | Pressure switch adjustment | 34 |
| 6.12.1 | Air pressure switch - check CO..... | 34 |
| 6.12.2 | Maximum gas pressure switch..... | 34 |
| 6.12.3 | Minimum gas pressure switch..... | 34 |
| 6.13 | Operation sequence of the burner | 35 |
| 6.13.1 | Burner start-up | 35 |
| 6.13.2 | Operation | 35 |
| 6.13.3 | Burner flame goes out during operation..... | 35 |
| 6.13.4 | Ignition failure..... | 35 |
| 6.14 | Final checks (with burner operating)..... | 36 |
| 7 | Maintenance | 37 |
| 7.1 | Notes on safety for the maintenance | 37 |
| 7.2 | Maintenance programme | 37 |
| 7.2.1 | Maintenance frequency..... | 37 |
| 7.2.2 | Checking and cleaning..... | 37 |
| 7.3 | Opening the burner | 39 |
| 7.4 | Closing the burner..... | 39 |
| 8 | Faults - Possible causes - Solutions..... | 40 |
| 8.1 | Light oil operation..... | 40 |
| 8.2 | Gas operation | 43 |
| A | Appendix - Accessories | 45 |
| B | Appendix - Electrical panel layout..... | 46 |

1 Declarations

Declaration of conformity in accordance with ISO / IEC 17050-1

Manufacturer: RIELLO S.p.A.
 Address: Via Pilade Riello, 7
 37045 Legnago (VR)
 Product: Dual fuel gas oil/ gas burners
 Model: RLS 1000/M C13
 RLS 1200/M C13

These products are in compliance with the following Technical Standards:
 EN 676
 EN 267
 EN 12100
 and according to the European Directives:

| | | |
|-----|-------------|-------------------------------|
| GAD | 2009/142/EC | Gas Devices Directive |
| MD | 2006/42/EC | Machine Directive |
| LVD | 2006/95/EC | Low Voltage Directive |
| EMC | 2004/108/EC | Electromagnetic Compatibility |

Such products are marked as follows:

| | | | |
|--|----------------|---------------|-------------------------------------|
| | RLS 1000/M C13 | EC-0085CN0119 | Class 1 (EN 267) - Class 3 (EN 676) |
| | RLS 1200/M C13 | EC-0085CN0120 | Class 1 (EN 267) - Class 3 (EN 676) |

The quality is guaranteed by a quality and management system certified in accordance with UNI EN ISO 9001.

Manufacturer's Declaration

RIELLO S.p.A. declares that the following products comply with the NOx emission limits specified by German standard "1. BIm-SchV revision 26.01.2010".

| Product | Type | Model | Output |
|--------------------------------|--------|----------------|-----------------|
| Dual fuel gas oil/ gas burners | 1311 T | RLS 1000/M C13 | 1200 - 10600 kW |
| | 1312 T | RLS 1200/M C13 | 1500 - 11500 kW |

Legnago, 02.12.2012

Operating Manager
 RIELLO S.p.A. - Burners Department
 Ing. Ivan Zinna

Research and Development Director
 RIELLO S.p.A. - Burners Department
 Ing. R. Cattaneo

2 Information and general warnings

2.1 Information about the instruction manual

2.1.1 Introduction

The instruction manual supplied with the burner:

- is an integral and essential part of the product and must not be separated from it; it must therefore be kept carefully for any necessary consultation and must accompany the burner even if it is transferred to another owner or user, or to another system. If the manual is lost or damaged, another copy must be requested from the Technical Assistance Service of the area;
- is designed for use by qualified personnel;
- offers important indications and instructions relating to the installation safety, start-up, use and maintenance of the burner.

Symbols used in the manual

In some parts of the manual you will see triangular DANGER signs. Pay great attention to these, as they indicate a situation of potential danger.

2.1.2 General dangers

The **dangers** can be of **3 levels**, as indicated below.



Maximum danger level!
This symbol indicates operations which, if not carried out correctly, cause serious injury, death or long-term health risks.



This symbol indicates operations which, if not carried out correctly, may cause serious injury, death or long-term health risks.



This symbol indicates operations which, if not carried out correctly, may cause damage to the machine and/or injury to people.

2.1.3 Other symbols



DANGER: LIVE COMPONENTS
This symbol indicates operations which, if not carried out correctly, lead to electric shocks with lethal consequences.



DANGER: FLAMMABLE MATERIAL
This symbol indicates the presence of flammable materials.



DANGER: BURNING
This symbol indicates the risks of burns due to high temperatures.



DANGER: CRUSHING OF LIMBS
This symbol indicates the presence of moving parts: danger of crushing of limbs.



WARNING: MOVING PARTS
This symbol indicates that you must keep limbs away from moving mechanical parts; danger of crushing.



DANGER: EXPLOSION
This symbol signals places where an explosive atmosphere may be present. An explosive atmosphere is defined as a mixture - under atmospheric conditions - of air and flammable substances in the form of gases, vapours, mist or dust in which, after ignition has occurred, combustion spreads to the entire unburned mixture.



PERSONAL PROTECTION EQUIPMENT
These symbols indicate the equipment that must be worn and kept by the operator for protection against threats against safety and/or health while at work.



OBLIGATION TO ASSEMBLE THE HOOD AND ALL THE SAFETY AND PROTECTION DEVICES
This symbol signals the obligation to reassemble the hood and all the safety and protection devices of the burner after any maintenance, cleaning or checking operations.



ENVIRONMENTAL PROTECTION
This symbol gives indications for the use of the machine with respect for the environment.



IMPORTANT INFORMATION
This symbol indicates important information that you must bear in mind.

- This symbol indicates a list.

Abbreviations used

| | |
|------|---------|
| Ch. | Chapter |
| Fig. | Figure |
| Page | Page |
| Sec. | Section |
| Tab. | Table |

2.1.4 Delivery of the system and the instruction manual

When the system is delivered, it is important that:

- the instruction manual is delivered to the user by the system manufacturer, with the recommendation to keep it in the room where the heat generator is to be installed.
- The instruction manual shows:
 - the serial number of the burner;

.....

- the address and telephone number of the nearest Assistance Centre

.....

- The system supplier must carefully inform the user about:
 - the use of the system;
 - any further tests that may be required before activating the system;
 - maintenance, and the need to have the system checked at least once a year by a representative of the manufacturer or another specialised technician.
 To ensure a periodic check, the manufacturer recommends the drawing up of a Maintenance Contract.

2.2 Guarantee and responsibility

The manufacturer guarantees its new products from the date of installation, in accordance with the regulations in force and/or the sales contract. At the moment of the first start-up, check that the burner is integral and complete.



WARNING

Failure to observe the information given in this manual, operating negligence, incorrect installation and carrying out of non authorised modifications will result in the annulment by the manufacturer of the guarantee that it supplies with the burner.

In particular, the rights to the guarantee and the responsibility will no longer be valid, in the event of damage to things or injury to people, if such damage/injury was due to any of the following causes:

- incorrect installation, start-up, use and maintenance of the burner;
- improper, incorrect or unreasonable use of the burner;
- intervention of unqualified personnel;
- carrying out of unauthorised modifications on the equipment;
- use of the burner with safety devices that are faulty, incorrectly applied and/or not working;
- installation of untested supplementary components on the burner;
- powering of the burner with unsuitable fuels;
- faults in the fuel supply system;
- continuation of use of the burner when a fault has occurred;
- repairs and/or overhauls incorrectly carried out;
- modification of the combustion chamber with inserts that prevent the regular development of the structurally established flame;
- insufficient and inappropriate surveillance and care of those burner components most likely to be subject to wear and tear;
- use of non-original components, including spare parts, kits, accessories and optional;
- force majeure.

The manufacturer furthermore declines any and every responsibility for the failure to observe the contents of this manual.

3 Safety and prevention

3.1 Introduction

The burners have been designed and built in compliance with current regulations and directives, applying the known technical rules of safety and envisaging all the potential danger situations.

It is necessary, however, to bear in mind that the imprudent and clumsy use of the equipment may lead to situations of death risk for the user or third parties, as well as the damaging of the burner or other items. Inattention, thoughtlessness and excessive confidence often cause accidents; the same applies to tiredness and sleepiness.

It is a good idea to remember the following:

- The burner must only be used as expressly described. Any other use should be considered improper and therefore dangerous.

In particular:

it can be applied to boilers operating with water, steam, diathermic oil, and to other uses expressly foreseen by the manufacturer;

the type and pressure of the fuel, the voltage and frequency of the electrical power supply, the minimum and maximum deliveries for which the burner has been regulated, the pressurisation of the combustion chamber, the dimensions of the combustion chamber and the room temperature must all be within the values indicated in the instruction manual.

- Modification of the burner to alter its performance and destinations is not allowed.
- The burner must be used in exemplary technical safety conditions. Any disturbances that could compromise safety must be quickly eliminated.
- Opening or tampering with the burner components is not allowed, apart from the parts requiring maintenance.
- Only those parts envisaged by the manufacturer can be replaced.



The manufacturer guarantees safety and proper functioning only if all burner components are intact and positioned correctly.

3.2 Personnel training

The user is the person, body or company that has acquired the machine and intends to use it for the specific purpose. He is responsible for the machine and for the training of the people working around it.

The user:

- undertakes to entrust the machine exclusively to suitably trained and qualified personnel;
- undertakes to inform his personnel in a suitable way about the application and observance of the safety instructions. With that aim, he undertakes to ensure that everyone knows the use and safety instructions for his own duties;
- personnel must observe all the danger and caution indications shown on the machine.
- Personnel must not carry out, on their own initiative, operations or interventions that are not within their province.
- Personnel must inform their superiors of every problem or dangerous situation that may arise.
- The assembly of parts of other makes, or any modifications, can alter the characteristics of the machine and hence compromise operating safety. The manufacturer therefore declines any and every responsibility for any damage that may be caused by the use of non-original parts.


In addition:



- must take all the measures necessary to prevent unauthorised people gaining access to the machine;
- the user must inform the manufacturer if faults or malfunctioning of the accident prevention systems are noticed, along with any presumed danger situation;
- personnel must always use the personal protective equipment envisaged by legislation and follow the indications given in this manual.

4 Technical description of the burner

4.1 Burner designation

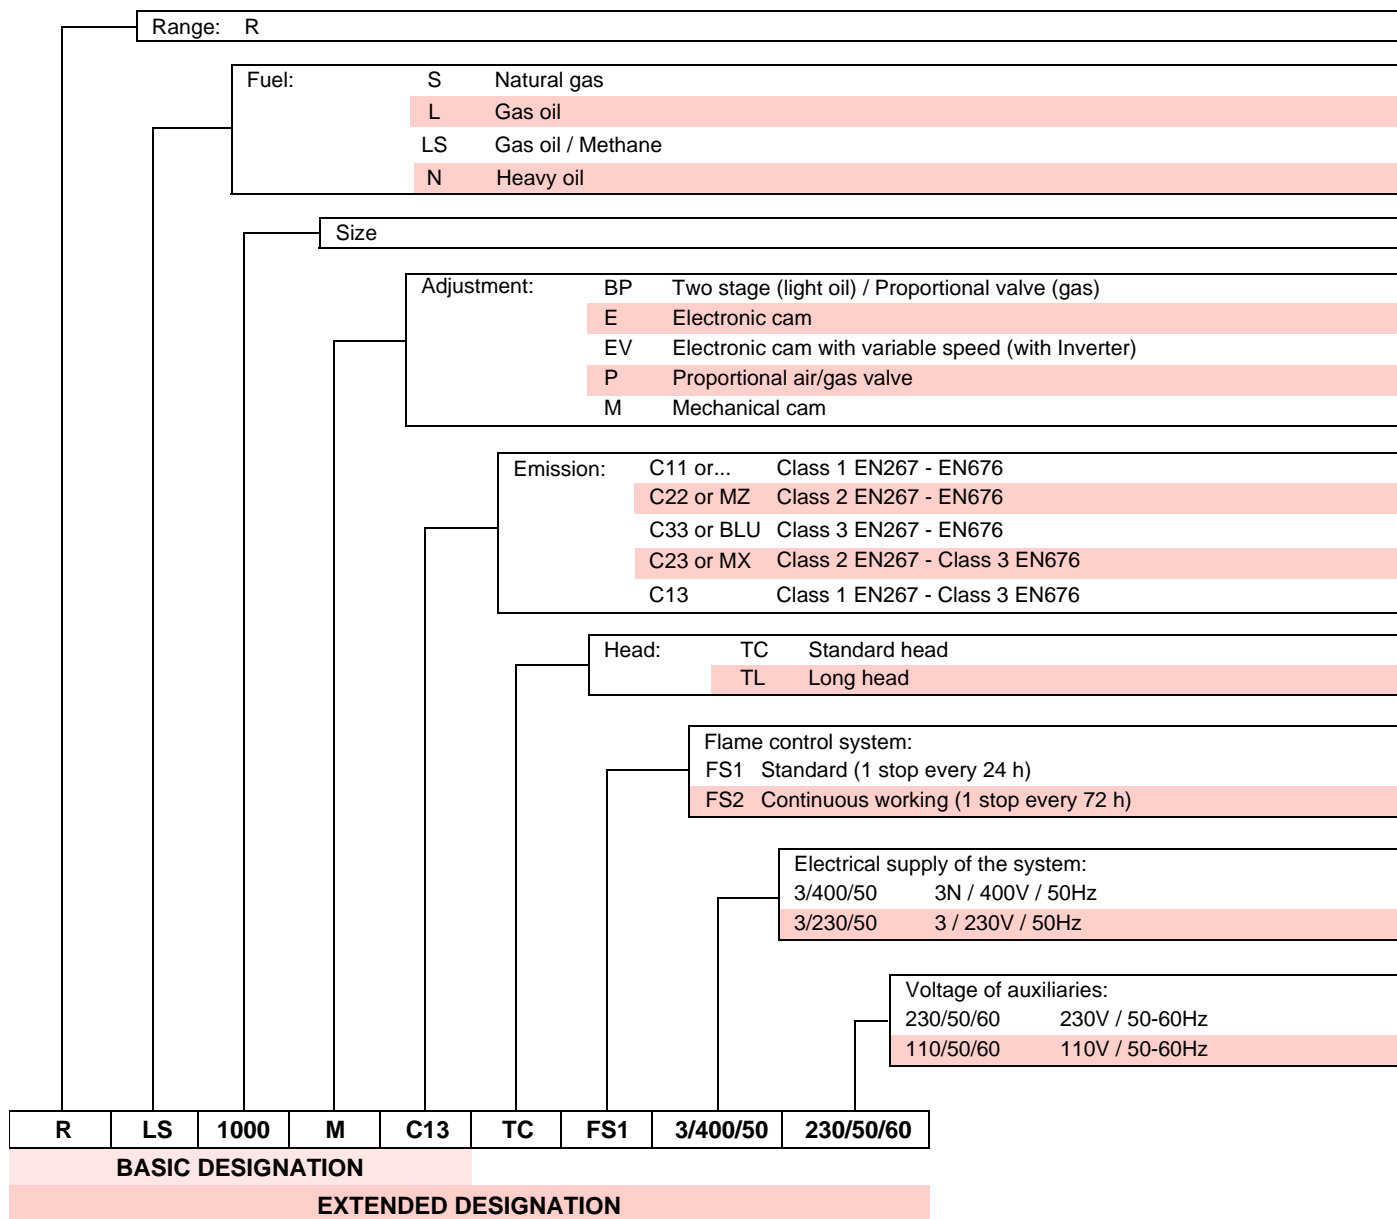

4.2 Models available

| Designation | Head | Voltage | Start-up | Code |
|----------------|------|----------|---------------|----------|
| RLS 1000/M C13 | TC | 3/400/50 | Star/Triangle | 20057525 |
| RLS 1200/M C13 | TC | 3/400/50 | Star/Triangle | 20053012 |

4.3 Burner categories - Countries of destination

| Country of destination | Gas category |
|--|----------------------|
| SE - FI - AT - GR - DK - ES - GB - IT - IE - PT - IS - CH - NO | I ₂ H |
| DE | I ₂ ELL |
| NL | I ₂ L |
| FR | I ₂ Er |
| BE | I ₂ E(R)B |
| LU - PL | I ₂ E |

4.4 Technical data

| Model | | | RLS 1000/M C13 | RLS 1200/M C13 |
|---|---|--------|-------------------|-------------------|
| Type | | | 1311 T | 1312 T |
| Output ⁽¹⁾ | min - max | kW | 1200/3750 ÷ 10600 | 1500/5500 ÷ 11500 |
| Delivery ⁽¹⁾ | | kg/h | 100/315 ÷ 867 | 171/462 ÷ 942 |
| Fuels | – Light oil, viscosity max. at 20 °C: 6 mm ² /s (1.5 °E - 6 cSt) – Natural gas: G20 (methane gas) - G21 - G22 - G23 - G25 | | | |
| Gas pressure at max. output ⁽²⁾ - Gas: G20/G25 | | mbar | 67.1/101.2 | 97.2/145 |
| Operation | – Intermittent (min. 1 stop in 24 hours) – Progressive two-stage or modulating by kit (See accessories) | | | |
| Pump | Output at 30 bar | kg/h | 1400 | 1826 |
| | Pressure range | bar | 9/40 | 9/40 |
| | Fuel temperature | °C max | 140 | 140 |
| Nozzles | | number | 1 | |
| Standard applications | Boilers: water, steam, diathermic oil | | | |
| Ambient temperature | | °C | 0 - 50 | |
| Combustion air temperature | | °C max | 60 | |
| Noise levels ⁽³⁾ | Sound pressure | dB(A) | 85.4 | 84.4 |
| | Sound power | | 100.6 | 99.7 |
| Weight | | kg | 500 | 540 |

Tab. A

⁽¹⁾ Reference conditions: Room temperature 20°C - Gas temperature 15°C - Barometric pressure 1013 mbar - Altitude 0 m a.s.l.

⁽²⁾ Pressure on the socket 5) (Fig. 4) with zero pressure in the combustion chamber and at maximum burner output.

⁽³⁾ Noise emission tests carried out as specified in EN 15036-1 with measurement accuracy $\delta = \pm 1.5$ dB, in the manufacturer's combustion chamber with burner operating on test boiler at maximum output.

4.5 Electrical data

| Model | | | RLS 1000/M C13 | | RLS 1200/M C13 |
|------------------------------|--------------------|--------|------------------------------|-------------|----------------|
| Electrical supply | | | 3N ~ 400V +/-10% 50 Hz | | |
| Fan motor IE2 | rpm | | 2935 | 2964 | 2920 |
| | V | | 400/690 | 400/690 | 400/690 |
| | kW | | 22 | 21 | 25 |
| | A | | 38.6 - 22.3 | 41.8 - 24.2 | 44.1 - 25.5 |
| Pump motor IE2 | rpm | | 1458 | | 1400 |
| | V | | 230 - 400 | | 400 |
| | kW | | 2.2 | | 4 |
| | A | | 9.3 - 5.4 | | 8.2 |
| Ignition transformer | V1 - V2 I1 - I2 | | 230V - 1 x 8 kV 1A - 20mA | | |
| Electrical power consumption | Light oil | kW max | 26 | 25 | 31 |
| | Gas | | 24 | 23 | 27 |
| Protection level | | | IP 55 | | |

Tab. B

4.6 Maximum dimensions

The maximum dimensions of the burner are given in Fig. 1.
Bear in mind that inspection of the combustion head requires the burner to be opened and the rear part turned on the hinge.

The maximum dimensions of the open burner are indicated by the L and R positions.

The I position is reference for the refractory thickness of the boiler door.

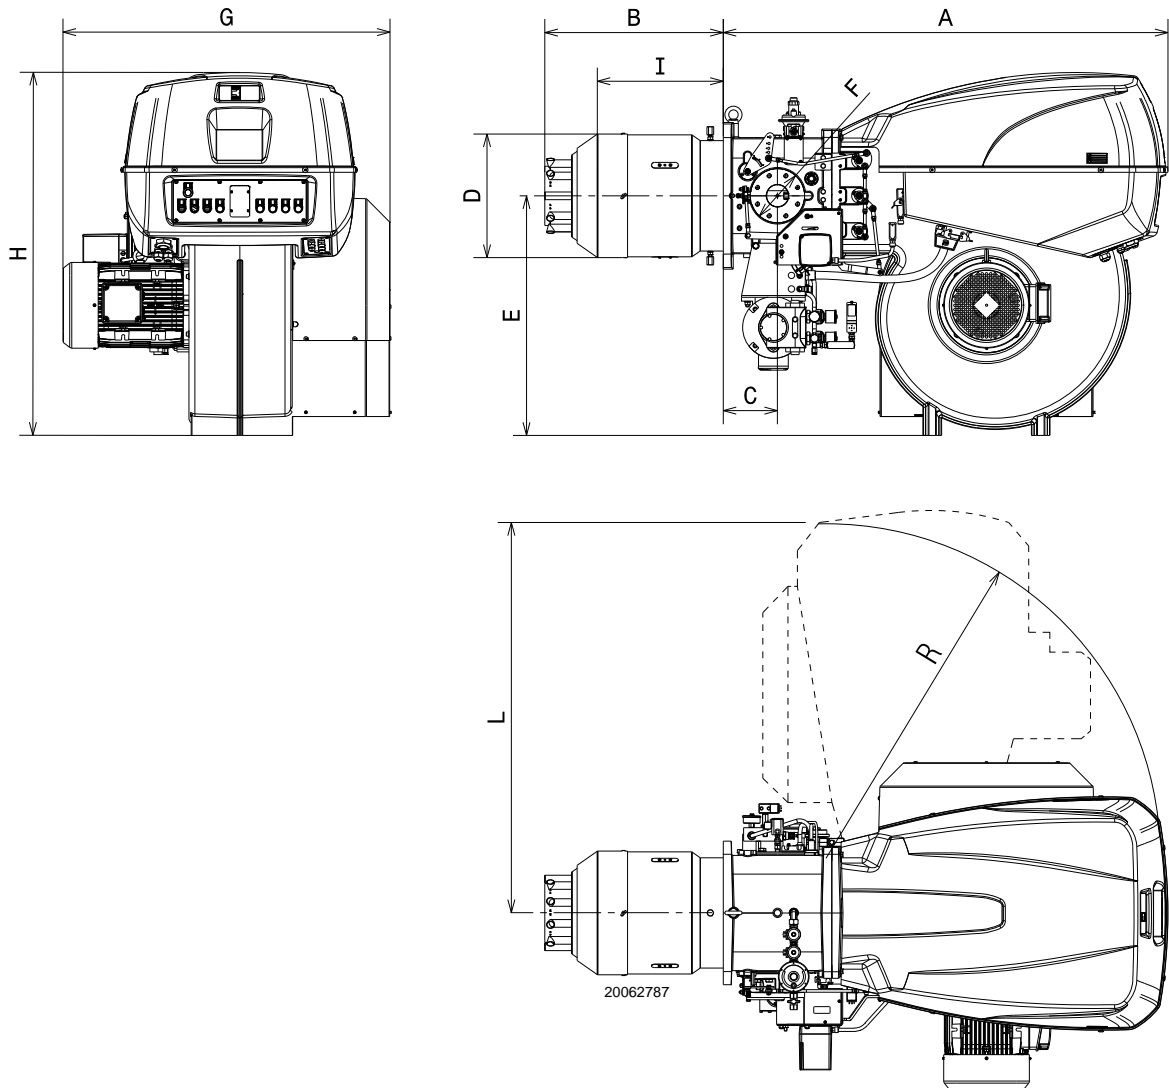


Fig. 1

| mm | A | B | C | D | E | F | G | H | I | L | R |
|----------------|------|-----|-----|-----|-----|------|------|------|-----|------|------|
| RLS 1000/M C13 | 1637 | 674 | 200 | 413 | 885 | DN80 | 1206 | 1338 | 484 | 1425 | 1350 |
| RLS 1200/M C13 | 1637 | 658 | 200 | 456 | 885 | DN80 | 1250 | 1338 | 465 | 1425 | 1350 |

Tab. C

4.7 Firing rates

The **MAXIMUM OUTPUT** is chosen from within the continuous diagram area (Fig. 2).

The **MINIMUM OUTPUT** must not be lower than the minimum limit of the diagram:

- RLS 1000/M C13 = 3750 kW
- RLS 1200/M C13 = 5500 kW



The firing rate value (Fig. 2) has been obtained considering an ambient temperature of 20°C, an atmospheric pressure of 1013 mbar (approx. 0m above sea level), and with the combustion head adjusted as shown on page 19.

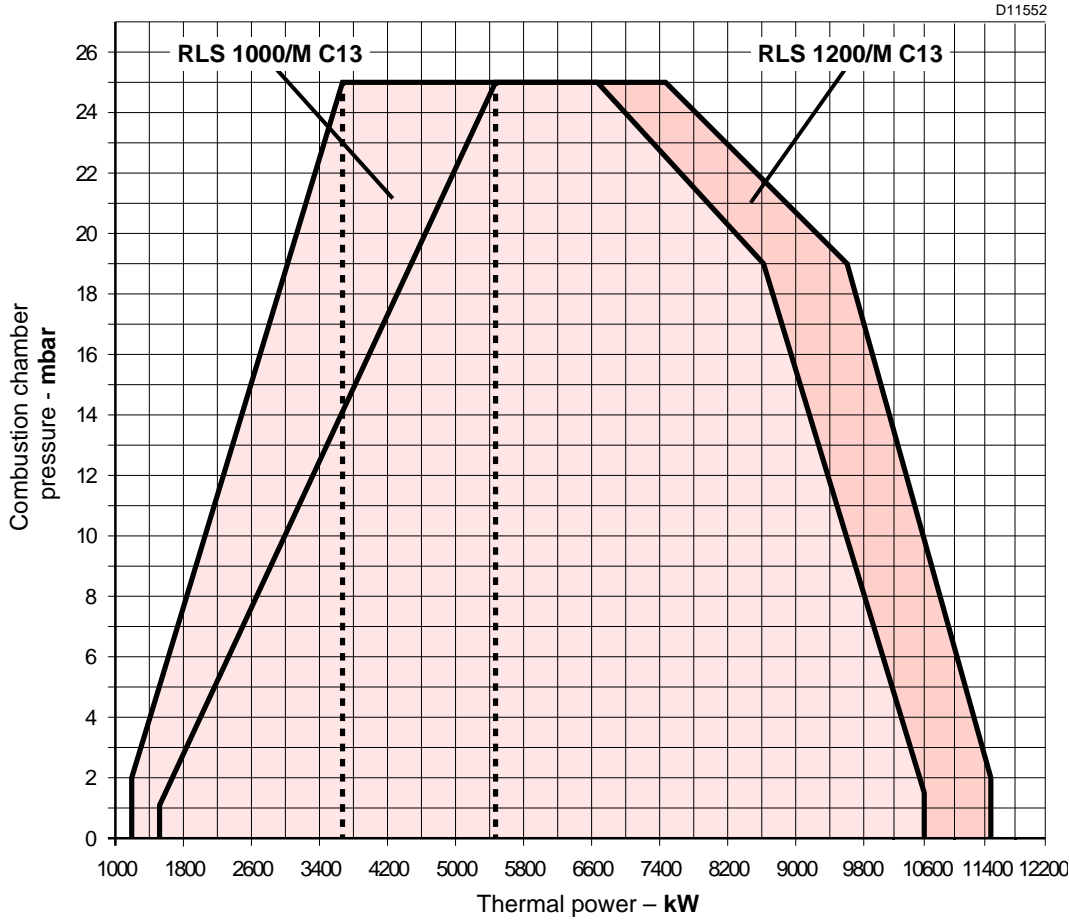


Fig. 2

4.8 Test boiler

The burner/boiler combination does not pose any problems if the boiler is EC approved and its combustion chamber dimensions are similar to those indicated in the diagram (Fig. 3).

If the burner must be combined with a boiler that has not been EC approved and/or its combustion chamber dimensions are clearly smaller than those indicated in the diagram, consult the manufacturer.

The firing rates were set in relation to special test boilers, according to EN 676 regulations.

In Fig. 3 you can see the diameter and length of the test combustion chamber.

Example:
Output 7000 kW - diameter 120 cm - length 6m

MODULATING RATIO

The modulating ratio, obtained in test boilers, according to standard (EN 676 for gas, EN 267 for light oil), is of 4:1 for light oil and 7:1 for gas.

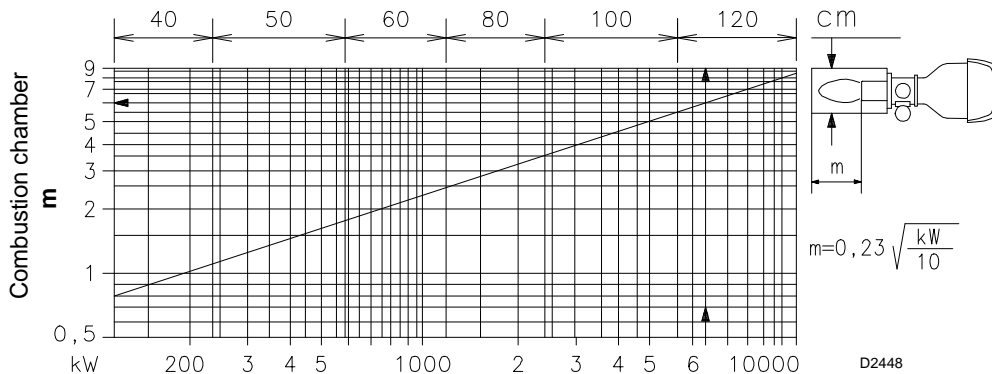


Fig. 3

4.9 Burner description

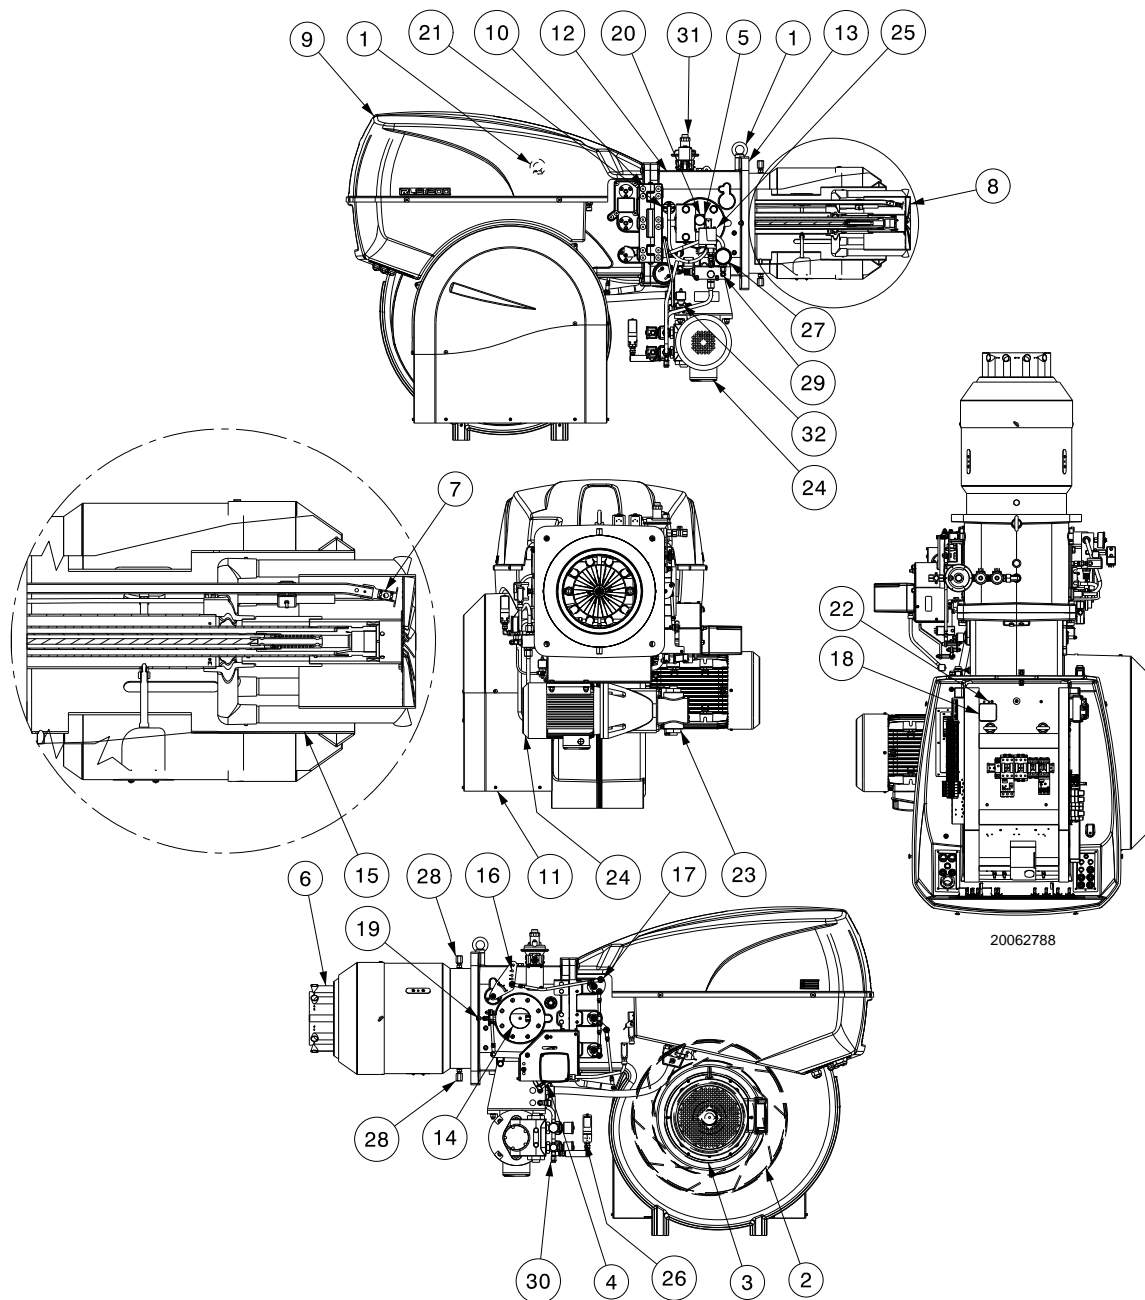


Fig. 4

- | | |
|--|--|
| 1 Lifting rings | 24 Pump motor |
| 2 Fan | 25 Minimum oil pressure switch |
| 3 Fan motor | 26 Maximum oil pressure switch |
| 4 Air damper servomotor | 27 Nozzle return pressure gauge |
| 5 Combustion head gas pressure test point | 28 Screws to lock the shutter during transportation (replace them with the M12x25 screws supplied as standard) |
| 6 Combustion head | 29 Oil modulator |
| 7 Ignition pilot burner | 30 Manometer connection |
| 8 Flame stability disk | 31 Pilot gas train |
| 9 Electrical panel casing | 32 3-way valve for the mechanical activation of the burner lance |
| 10 Hinge for opening the burner | |
| 11 Fan air inlet | |
| 12 Pipe coupling | |
| 13 Gasket for boiler fixing | |
| 14 Gas train flange | |
| 15 Shutter | |
| 16 Combustion head movement lever | |
| 17 Air damper movement levers | |
| 18 Minimum air pressure switch (differential operating type) | |
| 19 Combustion head air pressure test point | |
| 20 Maximum gas pressure switch with pressure test point | |
| 21 Cell UV | |
| 22 Pressure test point for air pressure switch “+” | |
| 23 Pump | |



The burner can be opened to the right or to the left without links to the fuel supply side.



The gas can only enter from the left side of the burner as shown in Fig. 4.

4.10 Electrical panel description

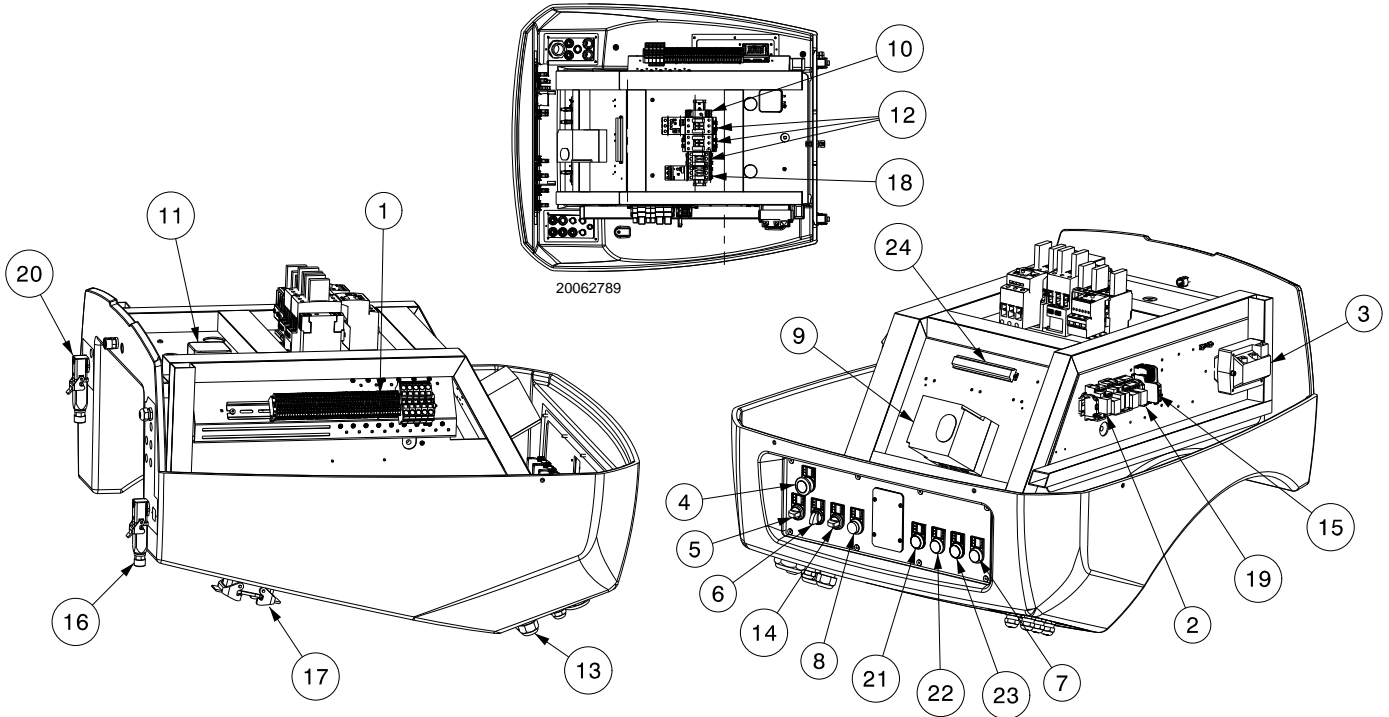


Fig. 5

- 1 Main terminal supply board
- 2 Clean contacts output relay
- 3 Ignition transformer
- 4 Stop push-button
- 5 OFF-automatic-manual selector
- 6 Power increase - power reduction selector
- 7 Motor, fan/pump motor thermal relay indicator light
- 8 Light signalling of burner lockout and reset switch
- 9 Electrical control box
- 10 Timer
- 11 Air pressure switch
- 12 Fan motor contactor and thermal relay, star-triangle starter
- 13 Supply cables, external connections and kits
- 14 Fuel selector and enable signal to remote fuel selector
- 15 Auxiliary circuits fuse
- 16 Plug/socket servomotor
- 17 Valve plug/socket/Pump motor/PGm (Deriv. unit)
- 18 Pump motor contactor and thermal relay

- 19 Oil/Gas selection relay
- 20 Flame sensor plug/sensor socket
- 21 Light signalling of mains live state
- 22 Heat request indicator light
- 23 Light signalling of main fuel valve open
- 24 Terminal board for RWF40 kit

NOTE

Two types of burner failure may occur:

- **Control box lockout:** if the control box button (red led) 9 (Fig. 5) and the backlit button 8) light up, it indicates that the burner is in lockout. Release by pressing the pushbutton 8).
- **Motors lockout:** release by pressing the button on the relevant thermal relay.

4.11 Burner equipment

| | |
|--|-------|
| Gasket for gas train flange | No. 1 |
| Gas flange fixing screws, M 16 x 70 | No. 8 |
| Thermal insulation screen | No. 1 |
| M 12 x 25 screws | No. 2 |
| M 20 x 70 screws to secure the burner flange to the boiler | No. 4 |
| Light gas flexible hoses | No. 2 |
| Fitting 1" 3/4" (RLS 1000/M C13) | No. 1 |
| Fitting 1" - 1" 1/2 (RLS 1200/M C13) | No. 1 |
| Fitting 1" - 1/2" | No. 1 |
| Rotating elbow 1"1/2 | No. 1 |
| Instruction booklet | No. 1 |
| Spare parts list | No. 1 |

4.12 Control box (LFL1.333..)

Warnings



WARNING

To avoid accidents, material or environmental damage, observe the following instructions!

The control box LFL1.333.. is a safety device! Avoid opening or modifying it, or forcing its operation. Riello S.p.A. cannot assume any responsibility for damage resulting from unauthorised interventions!

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Before modifying the wiring in the LFL1.333...control box connection area, fully disconnect the system from the power supply (omnipolar separation).
- Protection against electrocution from the control box and all connected electric components is obtained with the correct assembly.
- Before any intervention (assembly and installation operations, assistance, etc.), ensure the wiring is in order and that the parameters are correctly set, then make the safety checks.
- Falls and collisions can negatively affect the safety functions. In this case, the control box must not be operated, even if it displays no evident damage.
- **Do not press the reset button or the remote reset button of the control box for more than 10 seconds because this will damage the internal relay.**

For safety and reliability, comply with the following instructions:

- avoid conditions that can favour the development of condensate and humidity. Otherwise, before switching on again, make sure that the entire control box is perfectly dry!
- Static charges must be avoided since they can damage the control box's electronic components when touched.

Use

The control box LFL1.333.. is a control and supervision system of medium and large capacity forced draught burners for intermittent operation (at least one controlled shut-down every 24 hours).

Installation notes

- Check the electric wiring inside the boiler complies with the national and local safety regulations.
- Do not confuse the powered conductors with the neutral ones.
- Ensure that spliced wires cannot get into contact with neighbouring terminals. Use adequate ferrules.
- Arrange the H.V. ignition cables separately, as far as possible from the control box and the other cables.
- When wiring the unit, make sure that AC 230 V mains voltage cables are run strictly separate from extra low-voltage cables to avoid risks of electrical shock hazard.



Fig. 6

Electrical wiring of the flame detector

It is important for signal transmission to be almost totally free of any disturbances or loss:

- Always separate the detector cables from the other cables:
 - The capacitive reactance of the line reduces the size of the flame signal.
 - Use a separate cable.
- Respect the allowed cable lengths.
- The ionisation probe is not protected against the risk of electrocution. When connected to the electricity supply, the ionisation probe must be protected against any accidental contact.
- Position the ignition electrode and the ionisation probe so that the ignition spark cannot form an arc on the probe (risk of electric overcharge).

Technical data

| | |
|-------------------------------|---|
| Mains voltage | AC 230V -15% / +10% |
| Mains frequency | 50 / 60 Hz ±6 % |
| Fuse (Internal) | T6.3H250V |
| Primary fuse (external) | max. 10 A |
| Weight | approx. 1 kg |
| Power absorption | approx. AC 3.5 VA |
| Protection level | IP40 |
| Safety class | II |
| Input current at terminal 1 | max. 5 A continuous (peaks of 20 A / 20 ms) |
| Load on the control terminals | max. 4 A continuous (peaks of 20 A / 20 ms) |
| Environmental conditions | |
| Operation | DIN EN 60721-3-1 |
| Climatic conditions | Class 1K3 |
| Mechanical conditions | Class 1M2 |
| Temperature range | -20...+60°C |
| Humidity | < 95% RH |

4.13 Servomotor (SQM10.1....)

Warnings



To avoid accidents, material or environmental damage, observe the following instructions!

Avoid opening, modifying or forcing the actuators.

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Before modifying the wiring in the connection area of the servomotor, fully disconnect the burner control device from the power supply (omnipolar separation).
- To avoid the risk of electrocution, protect the connection terminals in a suitable manner and correctly fix the cover.
- Check the wiring is in order.
- Falls and collisions can negatively affect the safety functions. In this case, the servomotor must not be operated, even if it displays no evident damage.

Assembly notes

- Check the relevant national safety standards are respected.
- When assembling the servomotor and connecting the damper, the gears can be disengaged by means of a lever, allowing the drive shaft to be easily adjusted in both directions of rotation.



Fig. 7

Technical data

| | |
|---|---|
| Operating voltage | AC 220...240V, 50 Hz -15 % / +10 % AC 220 V, 60 Hz -15 % / +10 % |
| Auxiliary and limit switches switching capacity | 10 (3) A, AC 24...250 V |
| Angular positioning | up to 160 ° (base scale) |
| Assembly position | optional |
| Electrical protection | IP 54, DIN 40050 |
| Safety class | GB |
| Weight | approx. 1.7 kg |
| Actuator motor | synchronous motor |
| Power absorption | 9 VA |
| Environmental conditions: | |
| Operation | DIN EN 60 721-3-1 |
| Climatic conditions | Class 1K3 |
| Mechanical conditions | Class 1M2 |
| Temperature range | -20...+70°C |
| Humidity | < 95% RH |

5 Installation

5.1 Notes on safety for the installation

After carefully cleaning all around the area where the burner will be installed, and arranging the correct lighting of the environment, proceed with the installation operations.



All the installation, maintenance and disassembly operations must be carried out with the electricity supply disconnected.



The installation of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Combustion air inside the boiler must be free from hazardous mixes (e.g.: chloride, fluoride, halogen); if present, it is highly recommended to carry out cleaning and maintenance more frequently.

5.2 Handling

The burner packaging includes a wooden platform, it is therefore possible to move the burner (still packaged) with a transpallet truck or fork lift truck.



The handling operations for the burner can be highly dangerous if not carried out with the greatest attention: keep any unauthorised people at a distance; check the integrity and suitability of the available means of handling. Check also that the area in which you are working is empty and that there is an adequate escape area (i.e. a free, safe area to which you can quickly move if the burner should fall). When handling, keep the load at not more than 20-25cm from the ground.



After positioning the burner near the installation point, correctly dispose of all residual packaging, separating the various types of material.



Before proceeding with the installation operations, carefully clean all around the area where the burner will be installed.

5.3 Preliminary checks

Checking the consignment



After removing all the packaging, check the integrity of the contents. In the event of doubt, do not use the burner; contact the supplier.



The packaging elements (wooden cage or cardboard box, nails, clips, plastic bags, etc.) must not be abandoned as they are potential sources of danger and pollution; they should be collected and disposed of in the appropriate places.

| | | | | |
|---|---|---|---|---------|
| RBL | A | | B | C |
| D | E | | F | |
| GAS-KAASU <input checked="" type="checkbox"/> | G | | H | |
| GAZ-AEPIO | G | | H | |
| I | | | | |
| HEZİL FUEL | | L | | |
| RIELLO Sp.A I-37045 Legnago (VR) | | | | CE 0085 |

D9243

Fig. 8

Checking the characteristics of the burner

Check the identification label of the burner, showing:

- the model (A)(Fig. 8) and type of burner (B);
- the year of manufacture, in cryptographic form (C);
- the serial number (D);
- the data for electrical supply and the protection level (E);
- the absorbed electrical power (F);
- the types of gas used and the relative supply pressures (G);
- the data of the burner's minimum and maximum output possibilities (H) (see Firing rate)

Warning. The burner output must be within the boiler's firing rate;

- the category of the appliance/countries of destination (I).
- light oil maximum viscosity (L).



A burner label that has been tampered with, removed or is missing, along with anything else that prevents the definite identification of the burner makes any installation or maintenance work difficult.

5.4 Operating position



- The burner is designed to operate only in positions 1, 2, 3 and 4 (Fig. 9).
- Installation 1 is preferable, as it is the only one that allows the maintenance operations as described in this manual.
- Installations 2, 3 and 4 permit operation but make maintenance and inspection of the combustion head more difficult.



- Any other position could compromise the correct operation of the appliance.
- Installation 5 is prohibited for safety reasons.

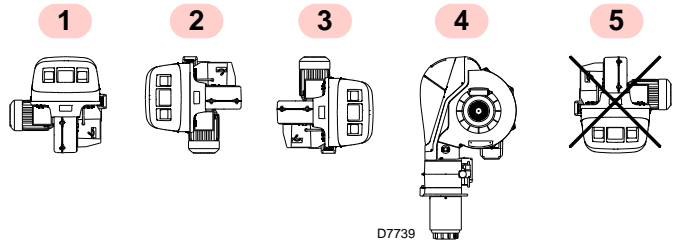


Fig. 9

5.5 Removing the shutter lockout screws

Remove the screws 1)-2) and nuts before fitting the burner onto the boiler (Fig. 10). Replace them with the screws 3) M12x25 supplied as standard.

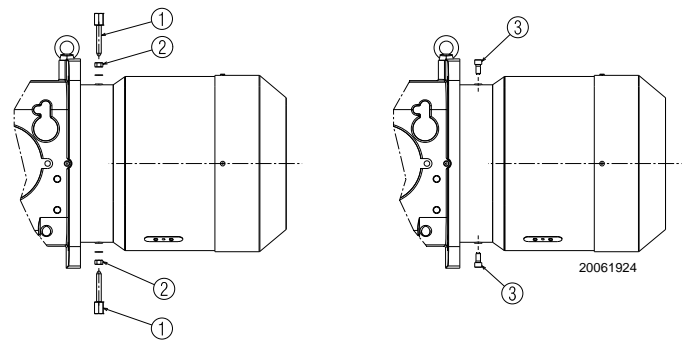


Fig. 10

5.6 Preparing the boiler

5.6.1 Boring the boiler plate

Pierce the closing plate of the combustion chamber, as in Fig. 11. The position of the threaded holes can be marked using the thermal insulation screen supplied with the burner.

| mm | A | B | C |
|----------------|-----|-----|------|
| RLS 1000/M C13 | 460 | 608 | M 20 |
| RLS 1200/M C13 | 500 | 608 | M 20 |

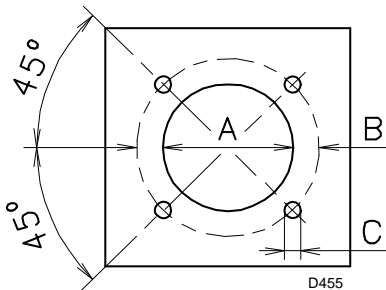


Fig. 11

5.6.2 Blast tube length

The length of the blast tube must be selected according to the indications provided by the manufacturer of the boiler, and in any case it must be greater than the thickness of the boiler door complete with its fettling.

For boilers with front flue passes 1)(Fig. 12) or flame inversion chamber, a protection in refractory material 5) must be inserted between the boiler fettling 2) and the blast tube 4).

This protective fettling must not compromise the extraction of the blast tube.

For boilers with a water-cooled front piece, a refractory lining 2)-5)(Fig. 12) is not necessary, unless expressly requested by the boiler manufacturer.

5.7 Securing the burner to the boiler



Prepare a suitable lifting system using rings 3)(Fig. 12).

- Insert the thermal protection supplied with the blast tube 4).
- Insert the entire burner on the boiler hole, previously fitted, as in Fig. 11, and fix it with the screws supplied.



The seal between burner and boiler must be airtight.

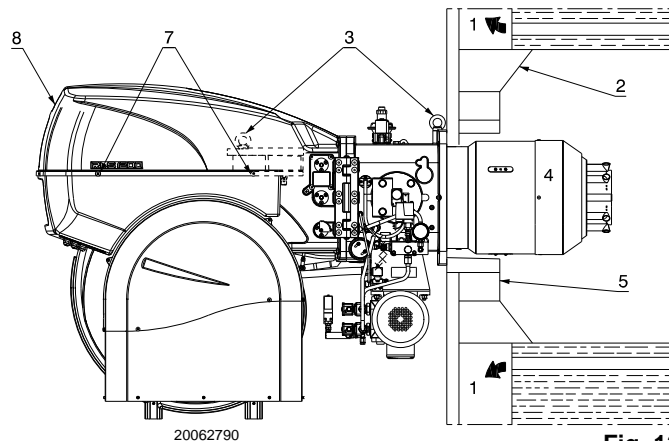


Fig. 12

5.8 Access to head internal part

In order to reach inside the combustion head (Fig. 13) proceed as follows:

- disconnect the electrical connections of the derivation unit servomotor pump motor;
- disconnect the leverages related to the cam and the movement of the head 12);
- unscrew the 4 fixing screws 1) and open the burner on the hinge;
- disconnect the cable 14) from the electrode 2);
- disconnect the light oil pipes unscrewing the two pipe fittings 3).



Be careful as some drops of fuel may leak out during this phase.

- Release the ignition pilot fitting 13);
- remove the screw/gas pressure socket 6) of the head;
- unscrew the locking screw of the oil lance 9) and extract the oil lance from the combustion head 10);
- pull out the inner part of the head 5).

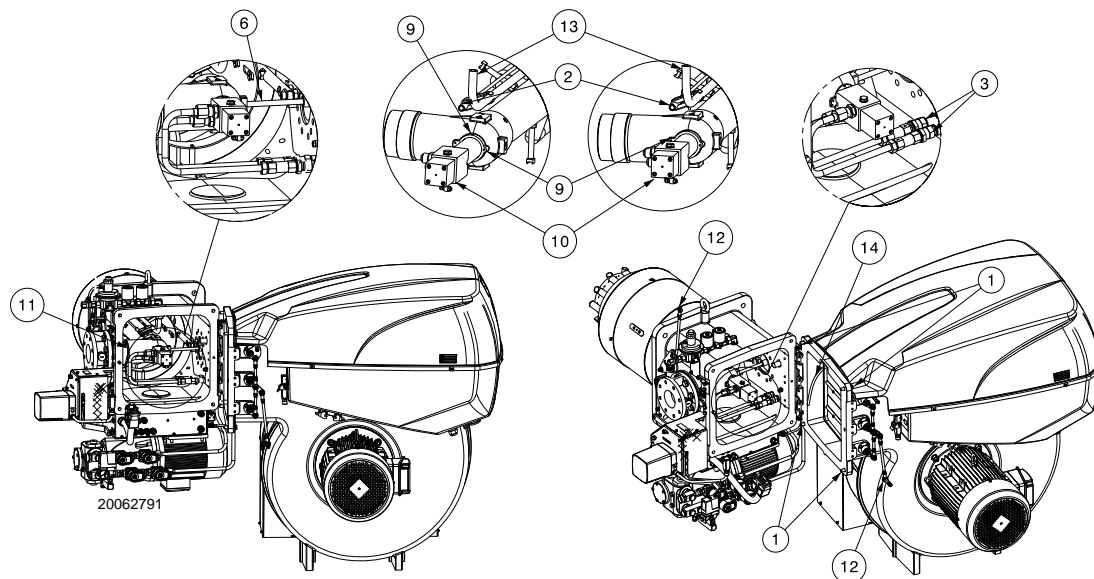


Fig. 13

5.9 Electrode position



Place the electrode on the ignition pilot observing the dimensions specified in Fig. 14.

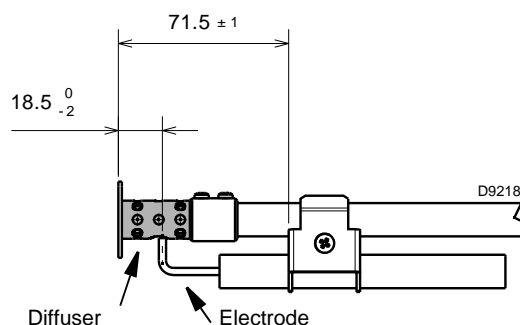


Fig. 14

5.10 Nozzle installation

The burner complies with the emission requirements of the EN 267 standard. In order to guarantee that emissions do not vary, recommended and/or alternative nozzles specified by Riello in the Instruction and warning booklet should be used.



It is advisable to replace the nozzle once a year during periodical maintenance.



The use of nozzles other than those specified by Riello S.p.A. and inadequate regular maintenance may result into emission limits non-conforming to the values set forth by the regulations in force, and in extremely serious cases, into potential hazards to people and objects.

The manufacturing company shall not be liable for any such damage arising from non-observance of the requirements contained in this manual.

Fit the nozzle with a 24 mm (for RLS 1000/M C13) and 41 mm (for RLS 1200/C13 M) box wrench, passing from the centre opening of the flame stability disc (Fig. 15).

Fit the nozzles with the fuel interception rod on the nozzle holder. To calibrate the delivery range of operation of the nozzle, adjust the fuel pressure on the nozzle return line, according to Tab. D.



- Do not use any sealing products such as gaskets, sealing compound, or tape.
- Be careful to avoid damaging the nozzle sealing seat.
- The nozzle must be screwed into place tightly but not to the maximum torque value provided by the wrench.

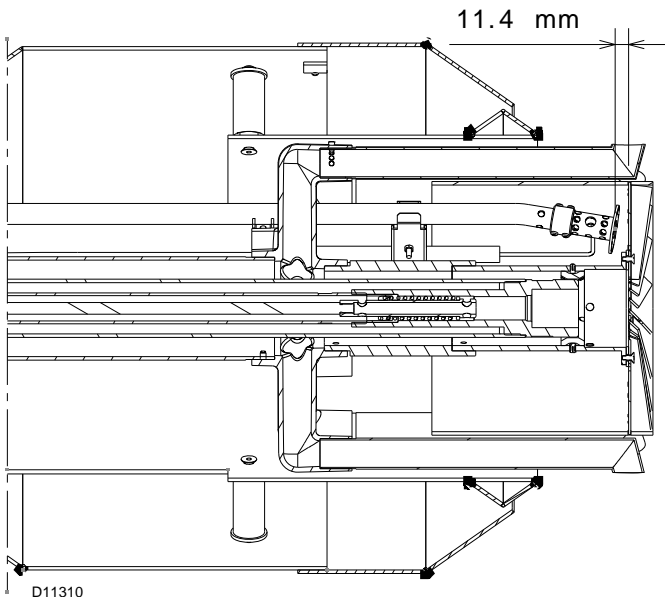


Fig. 15

5.10.1 Recommended nozzle

| Model | Nozzle |
|----------------|-----------------------------|
| RLS 1000/M C13 | - Bergonzo type B5 60° |
| | - Fluidics type W2 60° |
| RLS 1200/M C13 | - Bergonzo type C3 - C5 60° |

Complete range of nozzles:

- Bergonzo type B5 60°
350 - 375 - 400 - 425 - 450 - 475 - 500 - 525 - 550 - 575 - 600 - 650 - 700 - 750 - 800 - 850 - 900.
- Bergonzo type C3 - C5 60°
700 - 800 - 900 - 1000 - 1100.
- Fluidics type W2 60°:
375 - 400 - 450 - 500 - 550 - 600 - 650 - 700 - 750.

| Nozzle | kg/h | Delivery pressure bar | Return pressure (bar) | kg/h | kW |
|----------------------|------|-----------------------|-----------------------|-------|-------|
| Bergonzo B5 60° | 350 | 18 | 8 | 100 | 1200 |
| | | 20 | 17.5 | 315 | 3750 |
| | 600 | 20 | 6 | 140 | 1675 |
| | | 22 | 16 | 563 | 6700 |
| | 750 | 20 | 6.5 | 180 | 2150 |
| | | 22 | 19 | 722 | 8600 |
| 900 | 16 | 4 | 168 | 2000 | |
| | 20 | 15 | 867 | 10300 | |
| Bergonzo C3 - C5 60° | 700 | 18 | 3 | 172 | 2043 |
| | | 20 | 16 | 462 | 5500 |
| | 700 | 18 | 3 | 172 | 2043 |
| | | 20 | 19 | 635 | 7550 |
| | 900 | 17 | 5 | 237 | 2815 |
| | | 18 | 17.5 | 791 | 9400 |
| | 1100 | 16 | 6 | 273 | 3242 |
| | | 18 | 16.5 | 961 | 11425 |

Tab. D

5.11 Combustion head adjustment

The air damper servomotor 4)(Fig. 4), beyond varying the air output according to the output demand, through a leverage varies the combustion head adjustment.

This system allows an optimum adjustment also at minimum firing rate. Similarly to servomotor rotation, it is possible to vary the opening of the combustion head moving the tie-rod on the holes (5-6-7-8-10)(Fig. 16).

The selection of the hole to be used is determined based on the maximum output requested, as illustrated in Tab. E.

In the factory, the adjustment is adjusted for the maximum stroke (hole 10, Fig. 16).

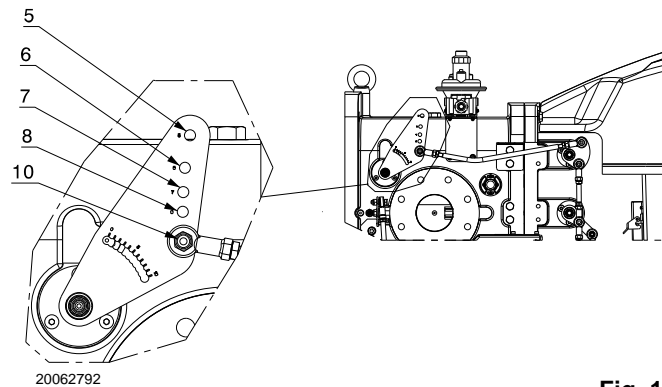


Fig. 16

| | Leverage hole | Output (kW) | |
|------------|---------------|-------------|-------|
| | | From | A |
| RLS 1000/M | 5 | 1200 | 3750 |
| | 5 | 3750 | 6700 |
| | 8 | 6700 | 8600 |
| | 8 | 8600 | 10600 |
| RLS 1200/M | 5 | 1500 | 5500 |
| | 5 | 5500 | 7500 |
| | 6 | 7500 | 9600 |
| | 10 | 9600 | 11500 |

Tab. E

5.12 Light oil supply



Explosion danger due to fuel leaks in the presence of a flammable source.

Precautions: avoid knocking, attrition, sparks and heat.

Make sure the fuel interception tap is closed before performing any operation on the burner.



WARNING

The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

5.12.1 Double-pipe circuit

The burner is equipped with a self-priming pump which is capable of feeding itself within the limits listed in Tab. F.

Tank higher than burner A (Fig. 17)

Distance "P" must not exceed 10 meters in order to avoid straining the pump's seal; distance "V" must not exceed 4 meters in order to allow pump self-priming even when the tank is almost empty.

Tank lower than burner B (Fig. 17)

Pump depression values higher than 0.45 bar (35 cm Hg) must not be exceeded. because at higher levels gas is released from the fuel, the pump starts making noise and its working life-span decreases.

It is good practice to ensure that the return and suction lines enter the burner from the same height; in this way it will be less probable that the suction line fails to prime or stops priming.

5.12.2 The loop circuit

A loop circuit consists of a loop of piping departing from and returning to the tank with an auxiliary pump that circulates the fuel under pressure. A branch connection from the loop feeds the burner.

This circuit is extremely useful whenever the burner pump does not succeed in self-priming because the tank distance and/or height difference are higher than the values listed in Tab. F.

| +/- H [m] | RLS 1000/M C13 | | | | RLS 1200/M C13 | | | |
|-----------|----------------|----|----|-----|----------------|----|----|-----|
| | Ø [mm] | | | | Ø [mm] | | | |
| | 20 | 22 | 24 | 27 | 22 | 24 | 27 | 36 |
| 4.0 | 26 | 45 | 73 | 138 | 19 | 33 | 65 | 300 |
| 3.0 | 22 | 39 | 63 | 120 | 16 | 28 | 55 | 260 |
| 2.0 | 18 | 33 | 53 | 102 | 13 | 23 | 45 | 220 |
| 1.0 | 15 | 26 | 44 | 84 | 10 | 18 | 38 | 185 |
| 0.5 | 13 | 23 | 39 | 75 | 9 | 16 | 33 | 165 |
| 0 | 11 | 20 | 34 | 66 | 7 | 13 | 30 | 145 |
| -4.0 | - | - | - | - | - | - | - | - |
| -3.0 | - | - | - | 12 | - | - | - | 30 |
| -2.0 | - | 7 | 14 | 30 | - | - | 11 | 70 |
| -1.0 | 7 | 14 | 24 | 48 | - | 9 | 20 | 108 |
| -0.5 | 9 | 17 | 29 | 57 | 5 | 11 | 25 | 125 |
| 0 | 11 | 20 | 34 | 66 | 7 | 13 | 29 | 145 |

Tab. F

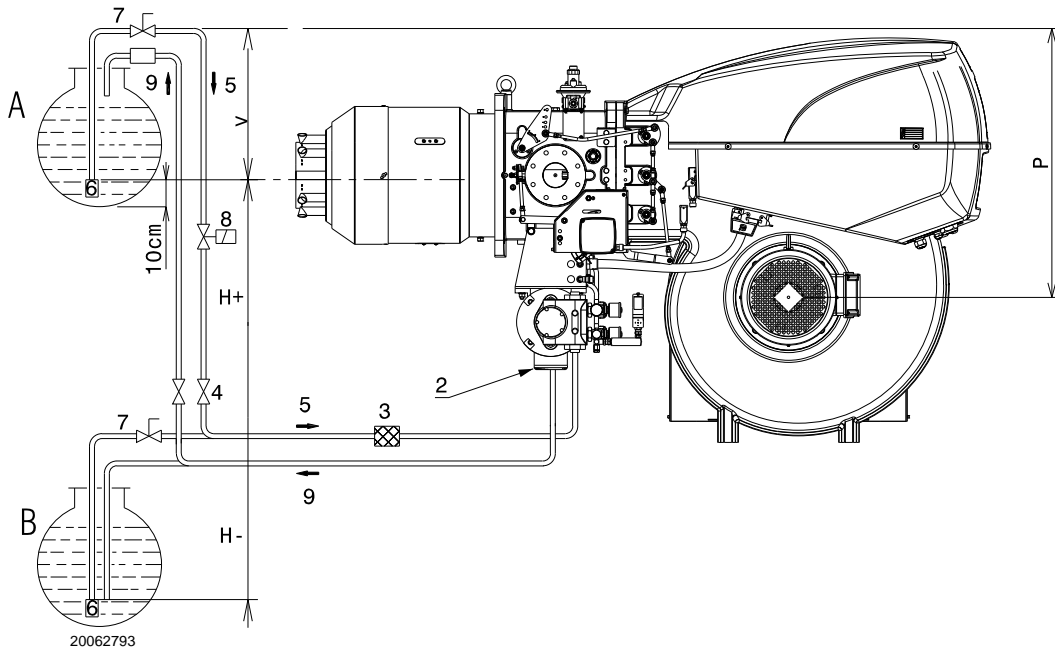


Fig. 17

Key (Fig. 17)

- H = Pump/Foot valve height difference
- Ø = Inside pipe diameter
- 1 = Burner
- 2 = Pump
- 3 = Filter
- 4 = Manual on/off valve
- 5 = Suction line
- 6 = Foot valve
- 7 = Quick closing manual valve with remote control (Italy only)

- 8 = On/off solenoid valve (Italy only). See electrical layout. Connections to be carried out by the installer (SV).
- 9 = Return line

5.12.3 Hydraulic connections




- Make sure that the flexible hoses to the pump supply and return line are installed correctly.



- Follow the instructions below:
- Tighten the flexible hoses with the supplied gaskets.
 - Take care that the hoses are not stretched or twisted during installation.
 - Place the pipes so that they are not crushed or are in contact with hot parts of the boiler and so it is possible to open the burner.
 - Finally, connect the other end of the flexible hoses to the suction and return pipes.

5.12.4 Hydraulic circuit diagram

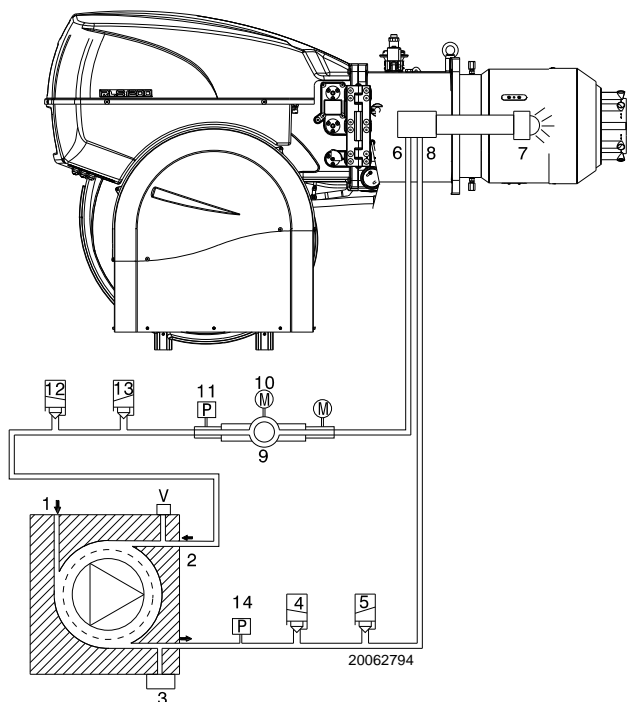

Key (Fig. 18)

- 1 Pump suction
- 2 Pump return line and nozzle return line
- 3 Pump pressure regulator
- 4 Delivery safety valve
- 5 Delivery safety valve
- 6 Nozzle delivery line
- 7 Nozzle without interception rod
- 8 Nozzle return line
- 9 Pressure variator on nozzle return line
- 10 Pressure variator servomotor
- 11 Pressure switch on nozzle return line
- 12 Safety valve on nozzle return line
- 13 Safety valve on nozzle return line
- 14 Pressure switch on pump delivery line
- M Pressure gauges
- V Vacuum connection

OPERATION

Pre-purging phase: valves 4), 5), 12) and 13) closed.

Ignition and operation phase: valves 4), 4), 12) and 13) open.

Stop: All valves closed.

5.12.5 Pressure variator

Calibration pressure on return line

With a servomotor position of 20°, the nut and the corresponding lock nut 6)(Fig. 19), are fixed in contact with the eccentric 3). During the rotation towards 130° of the servomotor, the eccentric will push the modulator shaft, taking the pressure read on the pressure gauge 2)(Fig. 19) to the desired value.

To calibrate the eccentric, loosen screws 7), and turn screw 4) until the desired eccentricity is obtained.

- By turning screw 4) to the right (+) the eccentricity increases, thereby increasing the difference between the maximum and minimum capacity of the nozzle.
- By turning screw 4) to the left (-) the eccentricity decreases, thereby decreasing the difference between the maximum and minimum capacity of the nozzle.

Calibration pressure on delivery line

To adjust the delivery pressure, operate on the pump as described on page 22.

Example:

if you use a 750 kg/h nozzle and you want to obtain power of 6650 kW, the pressure on the pressure gauge 3)(Fig. 19) (maximum pressure on return circuit) must be about 19 bar.

Relevant delivery pressure read on the pressure gauge 2), must be 22 bar (see table on page 18).

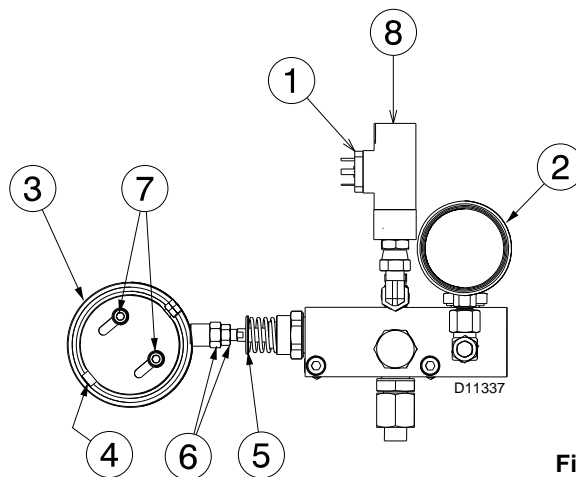


Fig. 18

Fig. 19

Key (Fig. 19)

- 1 Maximum oil pressure switch
- 2 Return pressure gauge
- 3 Variable eccentric
- 4 Eccentric adjustment screw
- 5 Piston stop ring
- 6 Piston calibration nut and lock nut
- 7 Eccentric locking screws
- 8 Adjustment screw/calibration for maximum oil pressure switch



For a correct calibration, the eccentric 3) must operate on the entire range of travel of the servomotor (20° ÷ 130°): a pressure variation must correspond to every variation of the servomotor.



Never take the piston of the variator to the end: the stop ring 5) determines the maximum travel.



Screw 8) (Fig. 19) does not need adjusting as it has been calibrated in the factory

To control the outlet delivery of the nozzle, proceed as follows:

- open the burner following the instructions on page 17,
- connect a pipe to the nozzle, simulate the ignition and proceed with the weighing at the maximum and minimum pressures.

If at the maximum delivery of the nozzle (maximum pressure on the return line) pressure oscillations can be seen on the pressure gauge 2), slightly reduce the pressure until they disappear.

NOTE:

The burner is factory calibrated with maximum pressure on the return line of approximately 19.5 bar and delivery pressure of approximately 22 bar.

5.13 Pump

5.13.1 Technical data

| Pump | RLS 1000/M C13 VBHRG | RLS 1200/M C13 VBHGRP |
|---------------------------------------|-------------------------|--------------------------|
| Min. delivery rate at 40 bar pressure | 1160 kg/h | 1660 kg/h |
| Delivery pressure range | 9 - 40 bar | 9 - 40 bar |
| Max. suction depression | 0.6 bar | 0.6 bar |
| Viscosity range | 6 - 800 cSt | 6 - 800 cSt |
| Max. light oil temperature | 140 °C | 140 °C |
| Max. suction and return pressure | 5 bar | 5 bar |
| Pressure calibration in the factory | 20 bar | 18 bar |

Tab. G

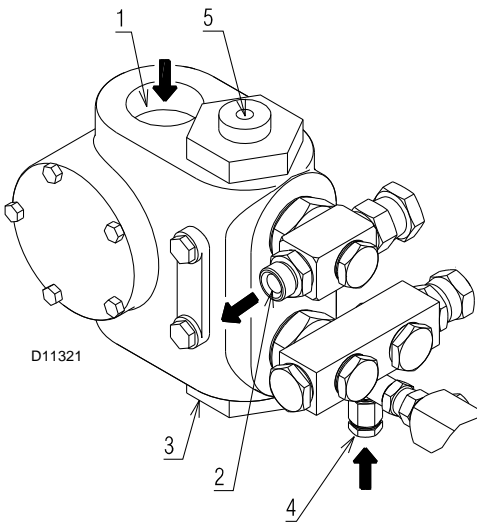


Fig. 20

Key (Fig. 20)

- | | |
|---------------------|-----------------------|
| 1 Suction line | G 3/4" (RLS 1000/M) |
| | G 1" 1/2 (RLS 1200/M) |
| 2 Return line | G 1" |
| 3 Gauge connection | G 1/4" |
| 4 Vacuum connection | G 1/4" |
| 5 Pressure adjuster | |

5.13.2 Priming pump



Before starting the burner, make sure that the tank return line is not clogged.

Obstructions in the line could cause the sealing organ located on the pump shaft to break.

- In order for self-priming to take place, the screw 4) on the pump (Fig. 20) must be loosened to bleed off the air contained in the suction line.
- Start the burner by closing the remote controls. As soon as the burner starts, check the direction of rotation of the fan blade.
- The pump can be considered to be primed when the light oil starts coming out of the screw 4).
- Close the burner and undo the screws 4).

The time required for this operation depends upon the diameter and length of the suction tubing.

If the pump fails to prime at first start-up and the burner locks out, wait approx. 15 seconds, reset the burner, and then repeat the start-up operation. And so on.

After 5 or 6 starting operations allow 2 or 3 minutes for the transformer to cool.

Do not illuminate the UV cell or the burner will lock out; the burner should lock out anyway about 10 seconds after it starts.



The a.m. operation is possible because the pump is already full of fuel when it leaves the factory.

If the pump has been drained, fill it with fuel through the opening on the vacuummeter 4)(Fig. 20) prior to starting; otherwise, the pump will seize.

Whenever the length of the suction piping exceeds 20-30 meters, the supply line must be filled using a separate pump.

5.14 Gas feeding



Explosion danger due to fuel leaks in the presence of a flammable source.

Precautions: avoid knocking, attrition, sparks and heat.

Make sure the fuel interception tap is closed before performing any operation on the burner.



WARNING

The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

5.14.1 Gas feeding line

Key (Fig. 21 - Fig. 22 - Fig. 23 - Fig. 24)

- 1 Gas input pipe
- 2 Manual valve
- 3 Vibration damping joint
- 4 Pressure gauge with pushbutton cock
- 5 Filter
- 6A Includes:
 - filter
 - working valve
 - safety valve
 - pressure adjuster
- 6B Includes
 - working valve
 - safety valve
 - pressure adjuster
- 6C Includes
 - safety valve
 - working valve
- 6D Includes:
 - safety valve
 - working valve
 - pressure adjuster
 - filter
- 7 Minimum gas pressure switch
- 8 Leak detection control, provided as an accessory or integrated, based on the gas train code. In compliance with the EN 676 standard, the leak detection control is compulsory for burners with maximum outputs over 1200 kW.
- 9 Gasket, for "flanged" versions only
- 10 Pressure adjuster
- 11 Train-Burner adaptor, supplied separately
- P2 Upline pressure of valves/adjuster
- P3 Upstream pressure of the filter
- L Gas train, supplied separately
- L1 The responsibility of the installer

MBC "threaded"

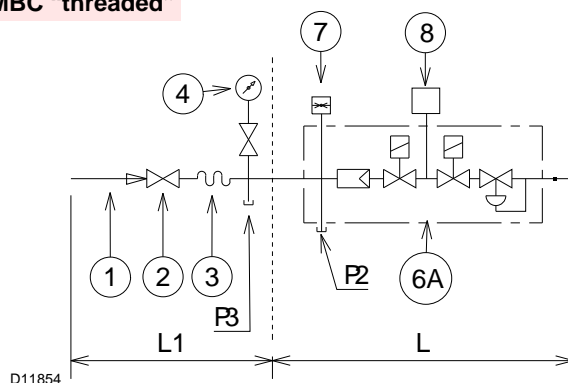


Fig. 21

MBC "flanged"

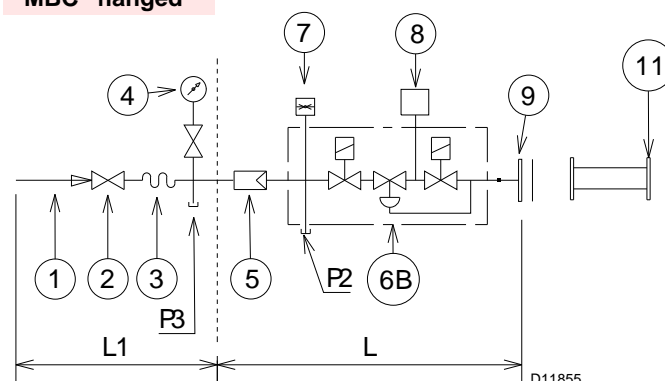


Fig. 22

DMV "flanged or threaded"

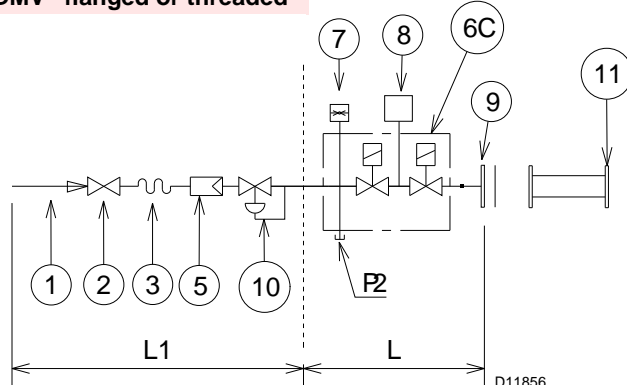


Fig. 23

CB "flanged or threaded"

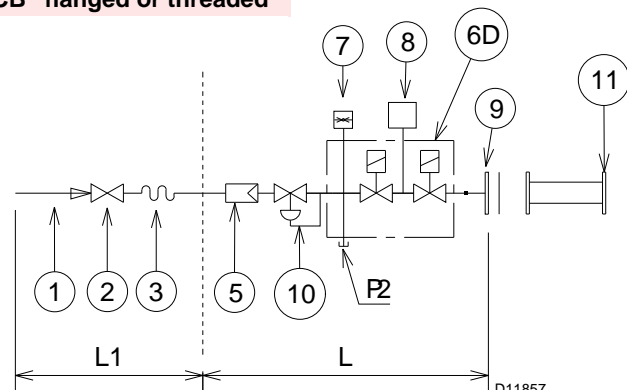


Fig. 24

5.14.2 Gas train

Approved according to standard EN 676 and provided separately from the burner.

To select the correct gas train model, refer to the supplied "Burner-gas train combination" manual.

5.14.3 Gas train installation



Disconnect the electrical power using the main switch.



Check that there are no gas leaks.



Pay attention when handling the train: danger of crushing of limbs.



Make sure that the gas train is properly installed by checking for any fuel leaks.



The operator must use the required equipment during installation.

The gas train is prearranged to be connected to the burner by the flange 1)(Fig. 25).

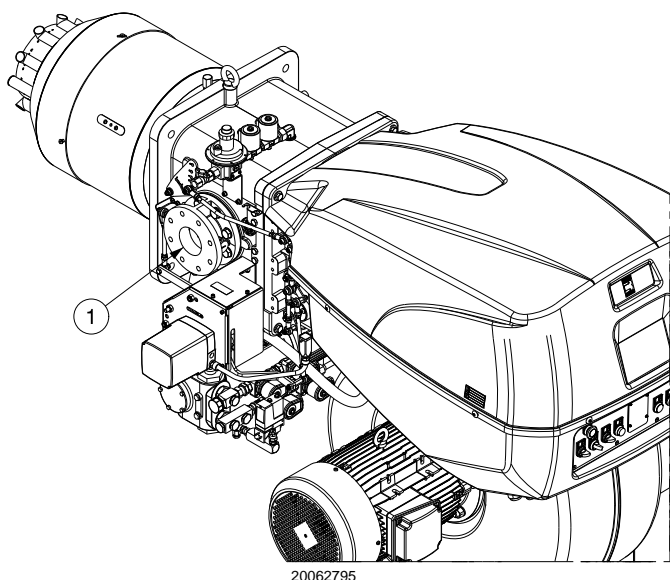


Fig. 25

5.14.4 Gas pressure

Tab. H indicates the pressure drop of the combustion head and the gas butterfly valve depending on the operating output of the burner.

| | kW | 1 Δp (mbar) | | 2 Δp (mbar) | |
|----------------|-------|-------------|-------|-------------|------|
| | | G 20 | G 25 | G 20 | G 25 |
| RLS 1000/M C13 | 3750 | 9.2 | 13.7 | 1.0 | 1.4 |
| | 4000 | 10.8 | 16.0 | 1.1 | 1.6 |
| | 4500 | 13.9 | 20.7 | 1.4 | 2.1 |
| | 5000 | 17.0 | 25.4 | 1.7 | 2.5 |
| | 5500 | 20.2 | 30.1 | 2.1 | 3.1 |
| | 6000 | 23.3 | 34.8 | 2.4 | 3.7 |
| | 6500 | 26.4 | 39.4 | 2.9 | 4.3 |
| | 7000 | 30.4 | 45.3 | 3.3 | 5.0 |
| | 7500 | 34.8 | 51.9 | 3.8 | 5.7 |
| | 8000 | 39.2 | 58.5 | 4.4 | 6.5 |
| | 8500 | 43.6 | 65.1 | 4.9 | 7.3 |
| RLS 1200/M C13 | 9000 | 49.2 | 73.3 | 5.5 | 8.2 |
| | 9500 | 55.0 | 82.0 | 6.1 | 9.2 |
| | 10000 | 60.8 | 90.7 | 6.8 | 10.1 |
| | 10600 | 67.8 | 101.1 | 7.6 | 11.4 |
| | 5500 | 23.1 | 34.5 | 2.1 | 3.1 |
| | 6000 | 27.9 | 41.6 | 2.4 | 3.7 |
| | 6500 | 32.6 | 48.7 | 2.9 | 4.3 |
| | 7000 | 37.4 | 55.7 | 3.3 | 5.0 |
| | 7500 | 42.1 | 62.8 | 3.8 | 5.7 |
| | 8000 | 48.3 | 72.1 | 4.4 | 6.5 |
| | 8500 | 54.5 | 81.3 | 4.9 | 7.3 |
| 9000 | 60.7 | 90.6 | 5.5 | 8.2 | |
| 9500 | 67.0 | 99.8 | 6.1 | 9.2 | |
| 10000 | 74.3 | 110.8 | 6.8 | 10.2 | |
| 10500 | 81.9 | 122.2 | 7.5 | 11.2 | |
| 11000 | 89.6 | 133.6 | 8.2 | 12.3 | |
| 11500 | 97.2 | 145.0 | 9.0 | 13.4 | |

Tab. H

The values shown in Tab. H refer to:

- Natural gas G 20 NCV 9.45 kWh/Sm³ (8.2 Mcal/Sm³)
- Natural gas G 25 NCV 8.13 kWh/Sm³ (7.0 Mcal/Sm³)

Column 1

Combustion head pressure drop.

Gas pressure measured at test point 1)(Fig. 26), with:

- combustion chamber at 0 mbar;
- burner working at maximum modulating output;
- combustion head set as on page 19.

Column 2

Pressure loss at gas butterfly valve 2)(Fig. 26) with maximum opening: 90°.

To calculate the approximate output at which the burner operates:

- subtract the combustion chamber pressure from the gas pressure measured at test point 1)(Fig. 26).
- Find, in Tab. H related to the burner concerned, the pressure value closest to the result of the subtraction.
- Read off the corresponding output on the left.

Example RLS 1000/M C13 with natural gas G20:

Operation at maximum modulating output

Gas pressure at test point 1)(Fig. 26) = 44.2 mbar
 Pressure in combustion chamber = 5 mbar
 $44.2 - 5 = 39.2$ mbar

A pressure of 39.2 mbar, column 1, corresponds in Tab. H to an output of 8000 kW.

This value serves as a rough guide; the effective output must be measured at the gas meter.

To calculate the required gas pressure at test point 1)(Fig. 26), set the maximum modulating output required from the burner operation:

- find the nearest output value in Tab. H for the burner in question.
- Read, on the right (column 1), the pressure at the test point 1) (Fig. 26).
- Add this value to the estimated pressure in the combustion chamber.

Example RLS 1000/M C13 with natural gas G20:

Operation at maximum modulating output

Gas pressure at an output of 8000 kW = 39.2 mbar
 Pressure in combustion chamber = 5 mbar
 $39.2 + 5 = 44.2$ mbar

pressure required at test point 1)(Fig. 26).

5.14.5 Pilot - gas train connection

The burner is fitted with a dedicated gas train that is fixed to the pipe coupling.

- It should be connected to the main train downstream the filter or the pressure adjuster (depending on configuration).

Oil burners (with LPG pilot) can be directly connected to the LPG cylinder.

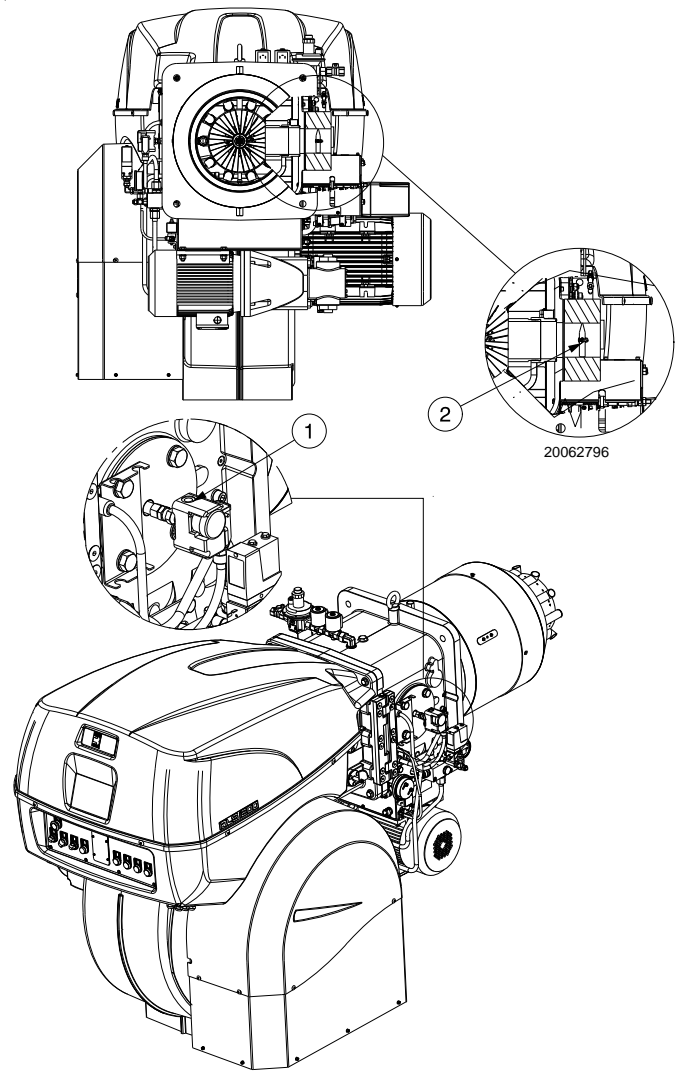


Fig. 26




Supply pressure 68 ÷ 500 mbar.

5.14.6 Ignition pilot burner

For proper operation, adjust gas pressure (measured at pressure test point 1)(Fig. 27) as follows:

| Model | Gas | mbar | Sm ³ /h |
|----------------|-----|------|--------------------|
| RLS 1000/M C13 | G20 | 1.5 | 12.3 |
| | G31 | 1.4 | 3.2 |
| RLS 1200/M C13 | G20 | 40 | 14.3 |
| | G31 | 30 | 7.1 |

Tab. I

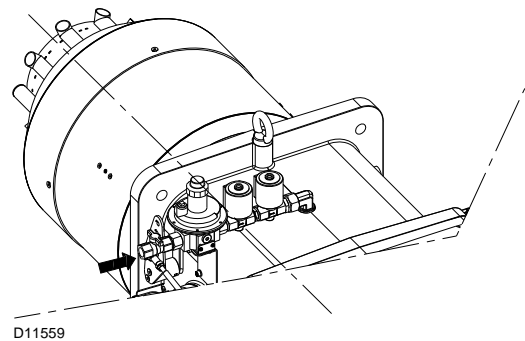

Check pilot flame stability before starting up the main burner.

In the case of ignition problems check:

- correct positioning of the ignition electrode;
- the gas pressure, according to indications.

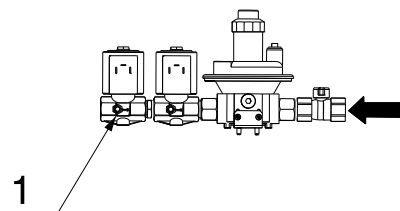


Fig. 27

5.15 Activation of the burner lance

The burner is equipped with a spray lance for light oil. Fig. 28 shows the 3-way valve used for the mechanical activation of the burner lance and the point at which the compressed air input A) must be connected.

It must operate at 6 ÷ 7 bar.


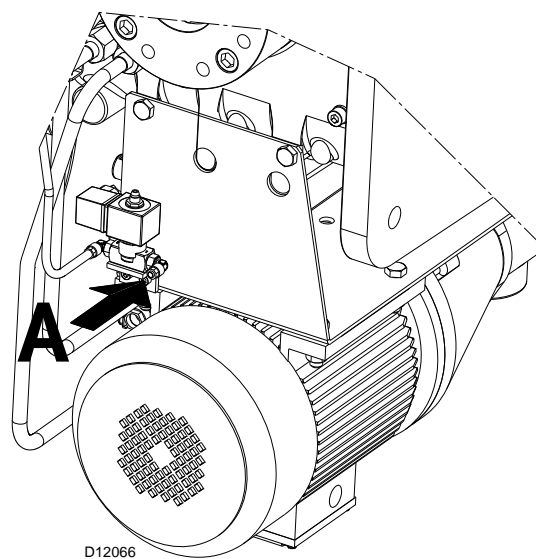


Fig. 28

5.16 Electrical wiring

Notes on safety for the electrical wiring

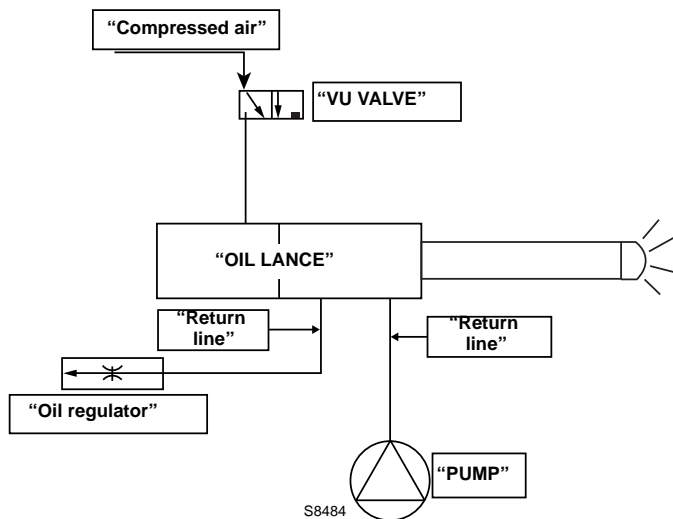

- The electrical wiring must be carried out with the electrical supply disconnected.
- Electrical wiring must be made in accordance with the regulations currently in force in the country of destination and by qualified personnel. Refer to the wiring diagrams.
- The manufacturer declines all responsibility for modifications or connections different from those shown in the wiring diagrams.
- Check that the electrical supply of the burner corresponds to that shown on the identification label and in this manual.
- The burner has been type-approved for intermittent use.
This means they should compulsorily be stopped at least once every 24 hours to enable the control box to perform checks of its own start-up efficiency. Normally, burner stopping is guaranteed by the boiler's thermostat/pressure switch.
- If this is not the case, a time switch should be fitted in series to TL to stop the burner at least once every 24 hours. Refer to the wiring diagrams.
- The electrical safety of the device is obtained only when it is correctly connected to an efficient earthing system, made according to current standards. It is necessary to check this fundamental safety requirement. In the event of doubt, have the electrical system checked by qualified personnel. Do not use the gas tubes as an earthing system for electrical devices.
- The electrical system must be suitable for the maximum power absorption of the device, as indicated on the label and in the manual, checking in particular that the section of the cables is suitable for that level of power absorption.
- For the main power supply of the device from the electricity mains:
 - do not use adapters, multiple sockets or extensions;
 - use a multiple pole switch with at least a 3mm gap between the contacts (overvoltage category III), as envisaged by the present safety standards.
- Do not touch the device with wet or damp body parts and/or in bare feet.
- Do not pull the electric cables.

Before carrying out any maintenance, cleaning or checking operations:



Disconnect the electrical supply from the burner by means of the main system switch.



Turn off the fuel interception tap.



Avoid condensate, ice and water leaks from forming.

If the cover is still present, remove it and proceed with the electrical wiring according to the wiring diagrams.

Use flexible cables in compliance with the EN 60 335-1 standard.

5.16.1 Supply cables and external connections passage

All the cables to be connected to the burner should be passed through cable grommets, as shown in Fig. 29.

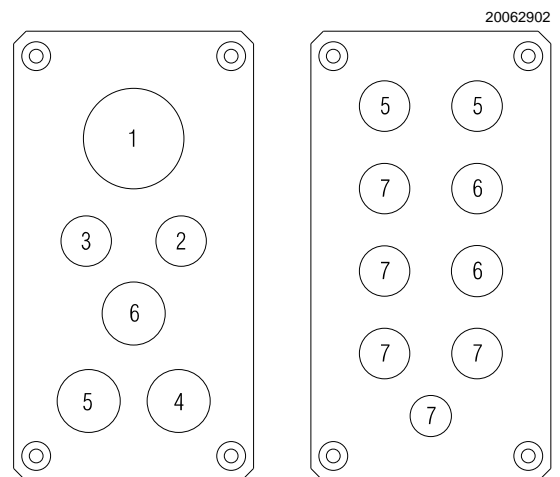


Fig. 29

Key (Fig. 29)

- 1 Electrical supply
- 2 Minimum gas pressure switch
- 3 Pressure switch for VPS gas valve leak detection
- 4 Gas train
- 5 Consents/Safety
- 6 Available
- 7 Available



After carrying out maintenance, cleaning or checking operations, reassemble the hood and all the safety and protection devices of the burner.

5.17 Calibration of the thermal relay

The thermal relay (Fig. 30) serves to avoid damage to the motor due to an excessive absorption increase or if a phase is missing. For calibration 2), refer to the table indicated in the electrical layout (electrical wiring in charge of the installer).

To reset, in case of an intervention of the thermal relay, press button "RESET" 1).

The button "STOP" 3) opens the NC contact (95-96) and stops the motor.


Insert a screwdriver in the window "TEST/TRIP" 4) and move it in the arrow direction (to the right) to carry out the thermal relay test.



WARNING

The automatic reset can be dangerous.

This operation is not foreseen in the burner operation.

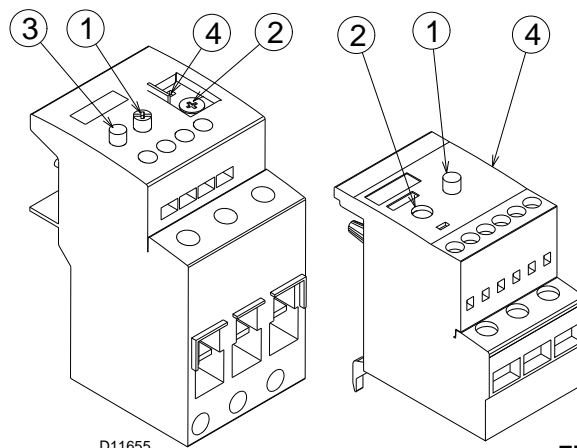

D11655

Fig. 30

6 Start-up, calibration and operation of the burner

6.1 Notes on safety for the first start-up



The first start-up of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Check the correct working of the adjustment, command and safety devices.

6.2 Adjustments prior to ignition (light oil)



It is recommended to adjust first the light oil burner and then the gas burner.
Carry out the fuel change with burner off.

The optimum calibration of the burner requires an analysis of the flue gases at the boiler outlet and interventions on the following points.

6.2.1 Nozzle

See information on page 18.

6.2.2 Combustion head

The adjustment of the combustion head already carried out on page 19 need not be altered unless the 2nd° stage delivery of the burner is changed.

6.2.3 Pump pressure

In order to change pump pressure, act on screw 5)(Fig. 20). See information on page 18.

6.2.4 Fan damper

Refer to the adjustment of the servomotor on page 31.

6.3 Burner ignition (light oil)

Position the selector 1)(Fig. 31) in “AUTO”.

Position the selector 2) in “OIL” to select light oil fuel.


When the limit thermostat (TL) is closed, the “HEAT REQUEST” 3) signal must be switched on.

At first ignition, there is a momentary drop in fuel pressure due to the filling of the nozzle piping. This lowering of the fuel pressure

can cause the burner to lockout and can sometimes give rise to pulsations.

In the event that the burner locks-out again, refer to chapter ‘Faults - Possible causes - Solutions’ on page 40.

Once the following adjustments have been made, the ignition of the burner must generate a noise similar to the noise generated during operation.

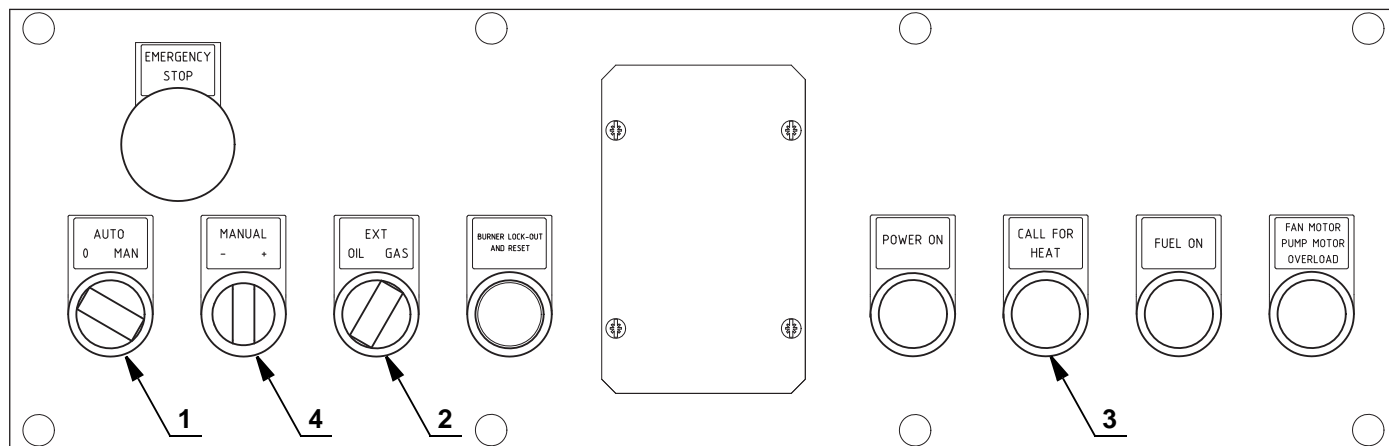

S8411

Fig. 31

6.4 Adjustments prior to ignition (gas)

In addition, the following adjustments must also be made:

- Slowly open the manual valves situated upstream from the gas train.
- Adjust the minimum gas pressure switch (Fig. 39) to the start of the scale.
- Adjust the maximum gas pressure switch (Fig. 38) to the end of the scale.
- Adjust the air pressure switch (Fig. 37) to the start of the scale.
- Purge the air from the gas line.
We recommend using a plastic tube routed outside the building and to purge air until gas is smelt.
- Fit a U-type pressure gauge or a differential pressure gauge (Fig. 32), with socket (+) on the gas pressure of the pipe coupling and (-) in the combustion chamber.
The manometer readings are used to calculate MAX burner output.
- Connect two lamps or testers to the two gas line solenoids to check the exact moment in which voltage is supplied.
This operation is unnecessary if each of the two solenoid valves is equipped with a pilot light that signals voltage passing through.



Before starting up the burner, it is good practice to adjust the gas train so that ignition takes place in conditions of maximum safety, i.e. with gas delivery at the minimum.

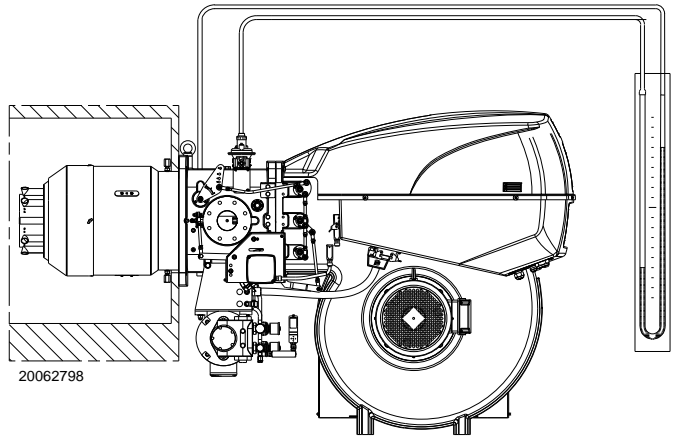


Fig. 32

6.5 Burner start-up (gas)

Close the remote controls and position the selector 1)(Fig. 31) to “**AUTO**”.

Position the selector 2) to “**GAS**” to select gas as fuel.

Make sure that the lights or testers connected to the solenoids, or the pilot lights on the solenoids themselves, indicate that no volt-

age is present. If voltage is present, stop the burner immediately and check the electrical connections.

When the limit thermostat (TL) is closed, the “**CALL FOR HEAT**” 3)(Fig. 31) signal must be on. The burner will subsequently start its starting cycle.

6.6 Burner ignition

The burner should light after having performed the above steps. If the motor starts but the flame does not appear and the control box goes into lockout, reset and wait for a new ignition attempt. If ignition is still not achieved, it may be that gas is not reaching the combustion head within the safety time period of 3 seconds; In this case increase gas ignition delivery.

The arrival of gas at the sleeve is indicated by the U-type manometer (Fig. 32).

In the event that the burner locks-out again, refer to chapter ‘Faults - Possible causes - Solutions’ on page 40.



In the event the burner stops, in order to prevent any damage to the installation, do not unblock the burner more than twice in a row. If the burner locks out for a third time, contact the customer service.



In the event there are further lockouts or faults with the burner, the maintenance interventions must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

Once the burner has fired, now proceed with global calibration operations.

6.7 Change of fuel

There are two change of fuel options:

- 1 with selector 2)(Fig. 31);
- 2 with a remote selector connected to the main terminal board. Positioning the selector 2)(Fig. 31) to “**EXT**” activates the remote selection of the fuel.

6.8 Servomotor adjustment

The servomotor (Fig. 33) adjusts simultaneously, through driving gears, the output and pressure of the air and the delivery of the fuel in use.

It is equipped with adjustable cams which operate as many switches.

- Cam I:** limits the servomotor limit switch on the maximum position (about 130°) (light oil operation).
- Cam II:** limits the servomotor limit switch on the 0° position. With the burner off the air damper is completely closed (light oil and gas operation).
- Cam III:** regulates the minimum modulating output. Position 45° is factory set (minimum light oil operation).
- Cam IV:** limits the servomotor limit switch on the max position (about 130°) (gas operation).
- Cam V:** regulates the minimum modulating output. Factory set at position 45° (gas operation).
- Rem. cams:** not used
- Lever 7:** servomotor reset

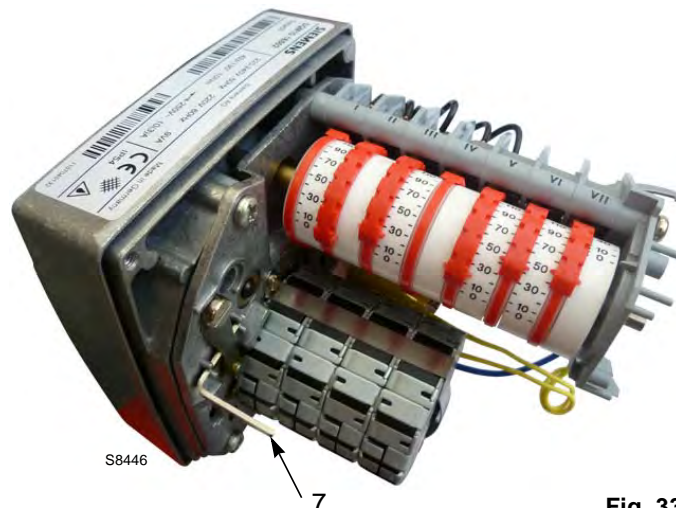


Fig. 33

6.9 Combustion air adjustment

The fuel/combustion synchronization is made by means of a servomotor connected to two variable profile cams, which act on the outlet air damper 1)(Fig. 34) and gas damper 2) and on the combustion head by appropriate levers.

It is advisable, to reduce the loss and for a wide calibration field, to adjust the servomotor to the maximum of the output used, the nearest possible to the maximum opening (130°).

On the gas butterfly valve, fuel step according to the burner output required, with servomotor completely open, is carried out by the pressure stabiliser placed on the train.

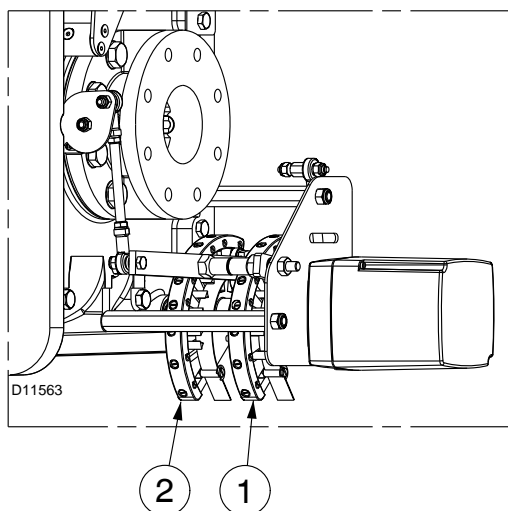


Fig. 34

The values indicated in Tab. J and Tab. K can be a reference for a good combustion calibration.

| EN 676 | | Excess air | | CO |
|--------|--|------------------------------------|------------------------------------|-------------|
| | | Max. output. $\lambda \leq 1.2$ | Max. output. $\lambda \leq 1.3$ | |
| GAS | Theoretical max CO ₂ 0 % O ₂ | CO ₂ % Calibration | | mg/kWh |
| | | $\lambda = 1.2$ | $\lambda = 1.3$ | |
| G 20 | 11.7 | 9.7 | 9 | ≤ 1000 |
| G 25 | 11.5 | 9.5 | 8.8 | ≤ 1000 |
| G 30 | 14.0 | 11.6 | 10.7 | ≤ 1000 |
| G 31 | 13.7 | 11.4 | 10.5 | ≤ 1000 |

Tab. J

| EN 267 | | Air excess | | CO |
|---|--|------------------------------------|------------------------------------|-------------|
| | | Max. output. $\lambda \leq 1.2$ | Min. output. $\lambda \leq 1.3$ | |
| Theoretical max CO ₂ 0 % O ₂ | | CO ₂ % Calibration | | mg/kWh |
| | | $\lambda = 1.2$ | $\lambda = 1.3$ | |
| 15.2 | | 12.6 | 11.5 | ≤ 1000 |

Tab. K

6.10 Burner adjustment and output modulation

6.10.1 Maximum output

The servomotor (Fig. 33 on page 31) must be adjusted to the maximum opening so that the air dampers are completely open.

6.10.2 Minimum output

Min output must be selected within the firing rate range shown on page 10.

Turn the selector 4)(Fig. 31) "output reduction", and keep it turned to "-" until the servomotor has closed the air damper and the gas butterfly valve at 35° (adjustment made in the factory).

Air adjustment

The starting profile of cam 1)(Fig. 35) must be progressively adjusted by turning the screws 2)(Fig. 35).



It is preferable not to turn the first screw since this is used to set the air damper to its fully closed position.

6.10.3 Intermediate outputs

After adjusting the maximum and minimum output of the burner, carry out air and gas adjustment on several intermediate positions of the servomotor.

The passage from one position to the next one is obtained by pressing the selector 4)(Fig. 31) on the symbol "+" or "-".

For better adjustment repeatability, take care to stop the rotation of the cam unit when the upper bearing that slides on the profile 4)(Fig. 35) is aligned with one of the adjustment screws 2).

Screw or unscrew the preset screw 2) to increase or decrease the air output so as to adjust it to the corresponding gas output.



After output adjustment (maximum, minimum and intermediate), it is important to lock all the air adjustment screws 2) by the locking screws 3) so as to avoid possible movements from the position of air - gas calibration.

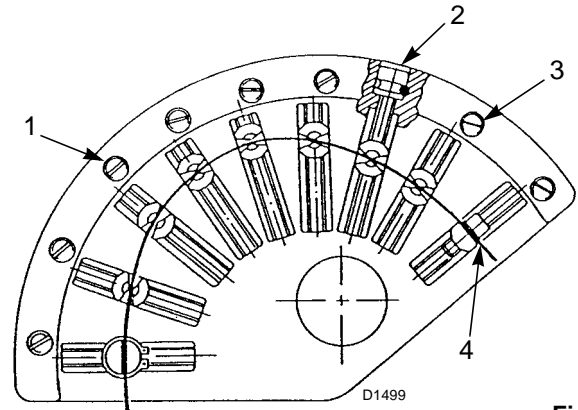


Fig. 35

Key (Fig. 35)

- 1 Cam
- 2 Adjustment screws
- 3 Locking screws
- 4 Adjustable profile

6.11 Air / fuel adjustment

The following adjustments must be performed during the calibration of the air/fuel ratio:

- A Oil pump outlet pressure:**
turn screw 5)(Fig. 20 on page 22), on the pump.
- B Air cam:**
turn the adjustment screws 2)(Fig. 35) after having loosened screws 3).
- C Gas cam:**
turn the adjustment screws 2)(Fig. 35) after having loosened screws 3).
- D Oil cam:**
modify the eccentricity by turning the screw 7)(Fig. 36) after having loosened screws 6).
By tightening the screw 7) the eccentricity increases, thereby increasing the difference between the maximum and minimum return pressure of the nozzle.

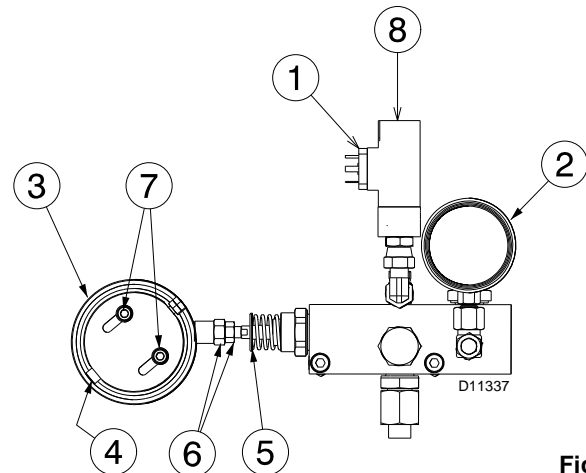


Fig. 36

Key (Fig. 36)

- 1 Maximum oil pressure switch
- 2 Return pressure gauge
- 3 Variable eccentric
- 4 Eccentric adjustment screw
- 5 Piston stop ring
- 6 Piston calibration nut and lock nut
- 7 Eccentric locking screws
- 8 Adjustment screw/calibration for maximum oil pressure switch

6.11.1 Burner calibration procedure

- Install the nozzle suitable to achieve the maximum desired output.
- Verify that the eccentricity of the oil cam is such to make a travel of about 8 mm on the shaft of oil modulator.
Normally, with a shaft travel of 8 mm, the pressure variation needed for the modulation of the minimum to maximum output is obtained.
To verify this, manually rotate the cam after having released the servomotor with the lever 7)(Fig. 33), so that the travel of the shaft is not exaggerated or insufficient. Remember to block the servomotor after the verification.
- Switch on the burner with the selector on the control panel in manual "MAN" 1) position (Fig. 31).
At this point, after pre-purge operation, the servomotor stops at about 45°.
- Adjust the outlet pressure of the pump as shown in point **A (oil pump outlet pressure)** to obtain an outlet pressure to the nozzle of 24 - 25 bar.
- Adjust the minimum return pressure to approx. 6 bar.
To do so, the length of the shaft 5)(Fig. 36) must be varied by means of nut 6).
- Calibrate the air delivery by adjusting the variable profile cam with the screws 2)(Fig. 35).
- Having performed this first adjustment, increase the output supplied via the automatic return selector on the control panel. Pause after a 15° rotation of the servomotor and perform another adjustment by means of the variable profile cam of the air.
A calibration that does not create smoky flame and that rapidly reaches the maximum output (maximum travel of the servomotor 130°) should be performed; calibrate the return pressure on the eccentric screw 5)(Fig. 36), to achieve the output desired and requested by the nozzle and then calibrate the intermediate points.
- Then recheck the values of the combustion parameters at the various modulation outputs and if necessary make the necessary adjustments.
- Turn off the burner and wait for the complete shut-down of the fan motor.
- Now move the selector 2)(Fig. 31) to "GAS", perform a new ignition and check the correct gas operation at the desired output.
If this is not so, calibrate the gas cam as in point **C (Gas Cam)** mentioned above.
- With the optimal adjustment achieved, remember to lock the adjustment screws of the cam profiles by means of screws 3)(Fig. 35).



WARNING

During the calibration of the cam, do not exceed the travel limits of the servomotor $0^\circ \div 130^\circ$ to avoid any sticking.

Check, performing a manual travel $0 - 130^\circ$ of the cam, that there are no mechanical stops before the micro-switches 1-2 of the servomotor are activated.

6.12 Pressure switch adjustment

6.12.1 Air pressure switch - check CO

Adjust the air pressure switch after performing all other burner adjustments with the air pressure switch set to the start of the scale (Fig. 37).

With the burner operating at min. output, increase adjustment pressure by slowly turning the relative knob clockwise until the burner locks out.

Then turn the knob anti-clockwise by about 20% of the set point and repeat burner starting to ensure it is correct.

If the burner locks out again, turn the knob anticlockwise a little bit more.



WARNING

In conformity with the standard, the air pressure switch must prevent the air pressure falling below 80% of the adjusted value and the CO in the flue gases exceeding 1% (10,000 ppm).

To check this, insert a combustion analyser into the chimney, slowly close the fan suction inlet (for example with cardboard) and check that the burner locks out before the CO in the fumes exceeds 1%.

The air pressure switch is installed in the "absolute" position, that is connected only to the pressure test point "+" 22)(Fig. 4).

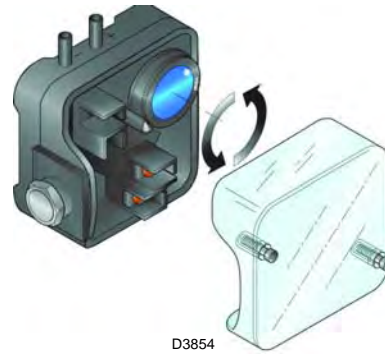


Fig. 37

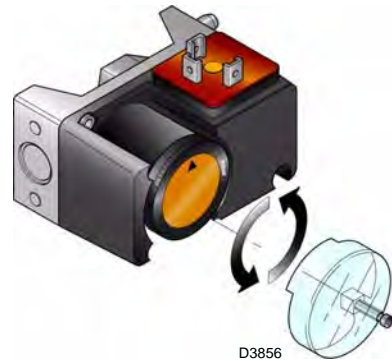


Fig. 38

6.12.2 Maximum gas pressure switch

Adjust the maximum gas pressure switch after having performed all the other burner adjustments with the maximum gas pressure switch set at the end of the scale (Fig. 38).

With the burner operating at maximum output, lower the adjustment pressure by slowly turning the relative knob anticlockwise until the burner locks out.

Now turn the knob clockwise by 2 mbar and repeat the start-up of the burner.

If the burner locks out again, turn the knob clockwise again by 1 mbar.

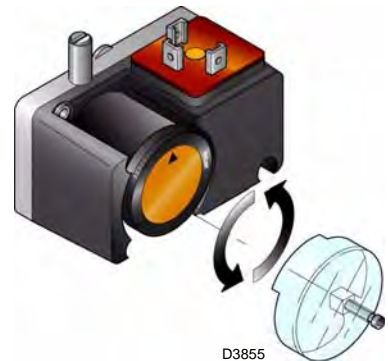


Fig. 39

6.12.3 Minimum gas pressure switch

Adjust the minimum gas pressure switch after performing all the other burner adjustments with the pressure switch set to the start of the scale (Fig. 39).

With the burner operating at maximum output, increase adjustment pressure by slowly turning the relative knob clockwise until the burner stops.

Now turn the knob anticlockwise by 2 mbar and repeat burner start-up to ensure it is uniform.

If the burner locks out again, turn the knob anticlockwise again by 1 mbar.

6.13 Operation sequence of the burner

6.13.1 Burner start-up

- 0s TL thermostat/pressure switch closure.
Fan motor starts up.
- 6s Servomotor start: 130° rotation to the right, until the activation of the contact on cam 1).
If it's operating with oil or cam 4) if it's operating with gas.
- 48s The air damper positions on the MAX output.
Pre-purging with the air delivery of the MAX output.
- 80s The servomotor rotates towards the left until the angle set on the cam 3).
If it's operating with oil or cam 5) if it's operating with gas.
- 109S The air damper and the gas butterfly valve adopt the MIN output position.
- 113s Ignition electrode strikes a spark.
- 116s The pilot valves VP1 and VP2 open.
The flame is ignited at a low output level, point A (Fig. 40).
- 119s The spark goes out.
- 130s The safety valve VS opens, along with the adjustment valve VR (quick opening).
The output is then progressively increased, with the valve opening slowly up to MIN output, point B (Fig. 40).
- 143s The control box starting cycle ends.

6.13.2 Operation

Burner without the output power regulator RWF40

Once the starting cycle is completed, the servomotor command moves on to the TR thermostat/pressure switch that controls the pressure or the temperature in the boiler, point C (Fig. 40). (The electrical control box continues to check the presence of the flame and the correct position of the air and gas maximum pressure switches).

- If the temperature or the pressure is low so the thermostat/pressure switch TR is closed, the burner progressively increases the output up to the MAX value (section C-D).
- If subsequently the temperature or pressure increases until TR opens, the burner progressively decreases its output to the MIN value (section E-F). The sequence repeats endlessly.
- The burner locks out when the heat request is less than the heat supplied by the burner at MIN output, (section G-H). The TL thermostat/pressure switch opens, and the servomotor returns to angle 0° limited by the contact of the cam 2). The air damper closes completely to reduce heat losses to a minimum.

For every change of output, the servomotor will automatically change the gas output (butterfly valve), the air output (fan damper) and the air pressure (2 shutters in the combustion head).

Burner with the output power regulator RWF40

See manual enclosed with the adjuster.

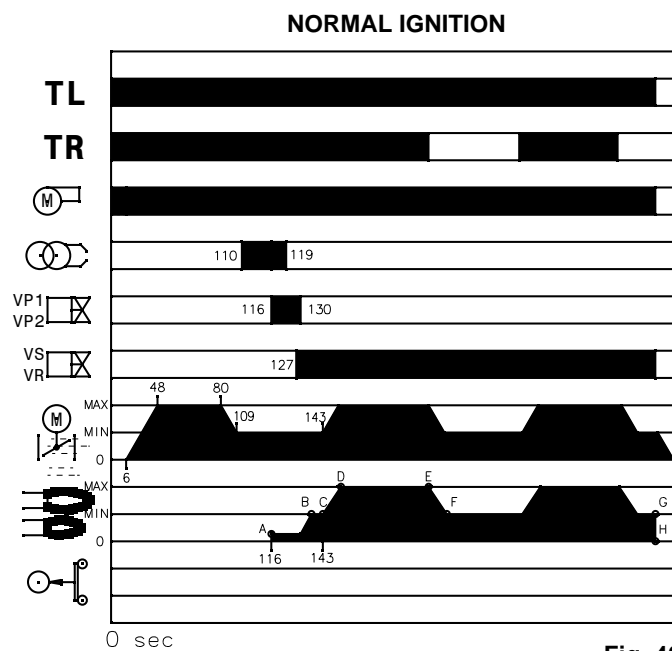


Fig. 40

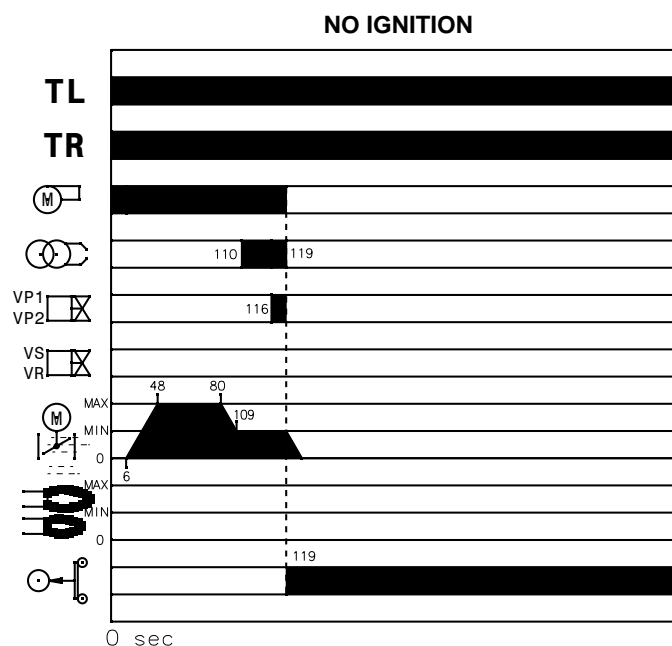


Fig. 41





6.13.3 Burner flame goes out during operation

If the flame should accidentally go out during operation, the burner will lock out within 1s.

6.13.4 Ignition failure

If the burner does not fire (Fig. 41), it goes into lockout within 3 sec. after the gas valve opening and 119 seconds after the TL closure.

6.14 Final checks (with burner operating)

| | | |
|---|---|--|
| <ul style="list-style-type: none"> ➤ Open the thermostat/pressure switch TL ➤ Open the thermostat/pressure switch TS |  | <p>The burner must stop</p> |
| <ul style="list-style-type: none"> ➤ Turn the gas maximum pressure switch knob to the minimum end of scale position ➤ Turn the air pressure switch to the maximum end of scale position |  | <p>The burner must stop in lockout</p> |
| <ul style="list-style-type: none"> ➤ Turn off the burner and cut off the power ➤ Disconnect the minimum gas pressure switch connector |  | <p>The burner must not start</p> |
| <ul style="list-style-type: none"> ➤ Disconnect the UV probe wire |  | <p>The burner must stop in lockout due to ignition failure</p> |

Tab. L



WARNING

Make sure that the mechanical locking systems on the various adjustment devices are fully tightened.

7 Maintenance

7.1 Notes on safety for the maintenance

The periodic maintenance is essential for the good operation, safety, yield and duration of the burner.

It allows you to reduce consumption and polluting emissions and to keep the product in a reliable state over time.



DANGER

The maintenance interventions and the calibration of the burner must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

Before carrying out any maintenance, cleaning or checking operations:



DANGER

Disconnect the electrical supply from the burner by means of the main system switch.



DANGER

Turn off the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

7.2 Maintenance programme

7.2.1 Maintenance frequency



The gas combustion system should be checked at least once a year by a representative of the manufacturer or another specialised technician.

7.2.2 Checking and cleaning



The operator must use the required equipment during maintenance.

Combustion

The optimum calibration of the burner requires an analysis of the flue gases.

Significant differences with respect to the previous measurements indicate the points where most care should be exercised during maintenance.

Combustion head

Open the burner and make sure that all components of the combustion head are in good condition, not deformed by the high temperatures, free of impurities from the surroundings and correctly positioned.


Electrical current to UV cell (Fig. 42)

Clean the glass cover from any dust that may have accumulated. To remove the photocell, pull out outwards; it is only pressed in. Min value for a good work: 70 μ A.

If the value is lower, it could be due to:

- exhausted photocell
- low voltage (lower than 187 V)
- bad regulation of the burner

In order to measure the current, use a microammeter of 100 μ A d.c., connected in series to the photocell, as in the scheme, with a capacitor of 100 μ F - 1V d.c. at the same level of the instrument.

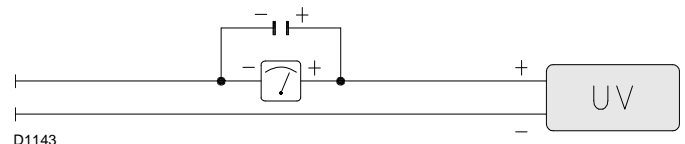

D1143

Fig. 42

Burner

Check that there is no abnormal wear or loosen screws, especially on cams 3)(Fig. 35).

Clean the outside of the burner.

Clean and grease the adjustable profile of the cams.

Fan

Check to make sure that no dust has accumulated inside the fan or on its blades, as this condition will cause a reduction in the air flow rate and provoke polluting combustion.

Boiler

Clean the boiler as indicated in its accompanying instructions in order to maintain all the original combustion characteristics intact, especially the flue gas temperature and combustion chamber pressure.

LIGHT OIL OPERATION

Pump

The delivery pressure must comply with the table on page 18.

The depression must be less than 0.45 bar.

Unusual noise must not be evident during pump operation.

If the pressure is found to be unstable or if the pump runs noisily, the flexible hose must be detached from the line filter and the fuel must be sucked from a tank located near the burner.

This measure permits the cause of the anomaly to be traced to either the suction piping or the pump.

If the problem lies in the suction line, check the filter is clean and that air is not entering the piping.

Filters (Fig. 43)

Check the filtering baskets on line 1) and at nozzle 2) present in the system.

Clean or replace if necessary.

If rust or other impurities are observed inside the pump, use a separate pump to lift any water and other impurities that may have deposited on the bottom of the tank.

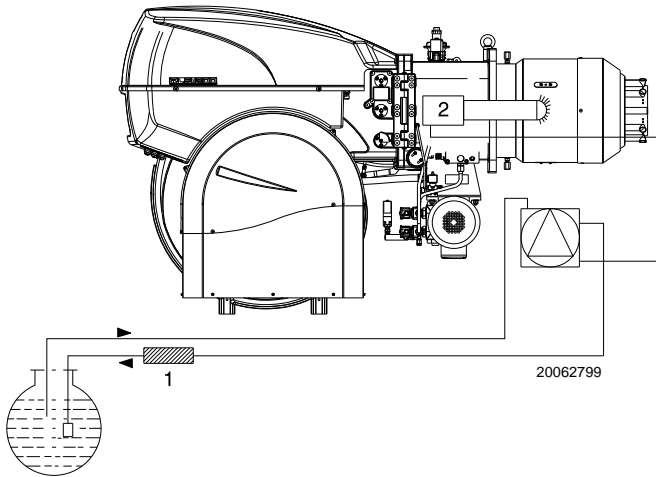


Fig. 43

Nozzles

It is advisable to replace nozzles once a year during periodical maintenance.
Do not clean the nozzle openings;

Hoses

Check that these are in good conditions.

Fuel tank

Approximately every 5 years, suck any water on the bottom of the tank using a separate pump.

Combustion

In case the combustion values found at the beginning of the intervention do not respect the standards in force or, in any case, do not correspond to a proper combustion, contact the Technical Assistant in order to carry out the necessary adjustments.

| EN 267 | Air excess | | CO |
|---|------------------------------------|------------------------------------|--------|
| | Max. output. $\lambda \leq 1.2$ | Min. output. $\lambda \leq 1.3$ | |
| Theoretical max CO ₂ 0 % O ₂ | CO ₂ % Calibration | | mg/kWh |
| | $\lambda = 1.2$ | $\lambda = 1.3$ | |
| 15.2 | 12.6 | 11.5 | ≤ 1000 |

Tab. M

GAS OPERATION

Gas leaks

Make sure that there are no gas leaks on the pipe between the gas meter and the burner.

Gas filter

Change the gas filter when it is dirty.

Combustion

In case the combustion values found at the beginning of the intervention do not respect the standards in force or, in any case, do not correspond to a proper combustion, contact the Technical Assistant in order to carry out the necessary adjustments.

| EN 676 | | Excess air | | CO |
|--------|---|------------------------------------|------------------------------------|--------|
| | | Max. output. $\lambda \leq 1.2$ | Max. output. $\lambda \leq 1.3$ | |
| GAS | Theoretical max CO ₂ 0 % O ₂ | CO ₂ % Calibration | | mg/kWh |
| | | $\lambda = 1.2$ | $\lambda = 1.3$ | |
| G 20 | 11.7 | 9.7 | 9 | ≤ 1000 |
| G 25 | 11.5 | 9.5 | 8.8 | ≤ 1000 |
| G 30 | 14.0 | 11.6 | 10.7 | ≤ 1000 |
| G 31 | 13.7 | 11.4 | 10.5 | ≤ 1000 |

Tab. N

7.3 Opening the burner



Disconnect the electrical supply from the burner by means of the main system switch.



Turn off the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

- Remove the tie-rods 1) and 4)(Fig. 44) of the head movement and damper opening lever, loosening nut 2);
- disconnect the socket 3) of the servomotor;
- disconnect the socket 7) of the derivation unit;
- remove the screws 5).

At this point, it is possible to open the burner on the hinge.

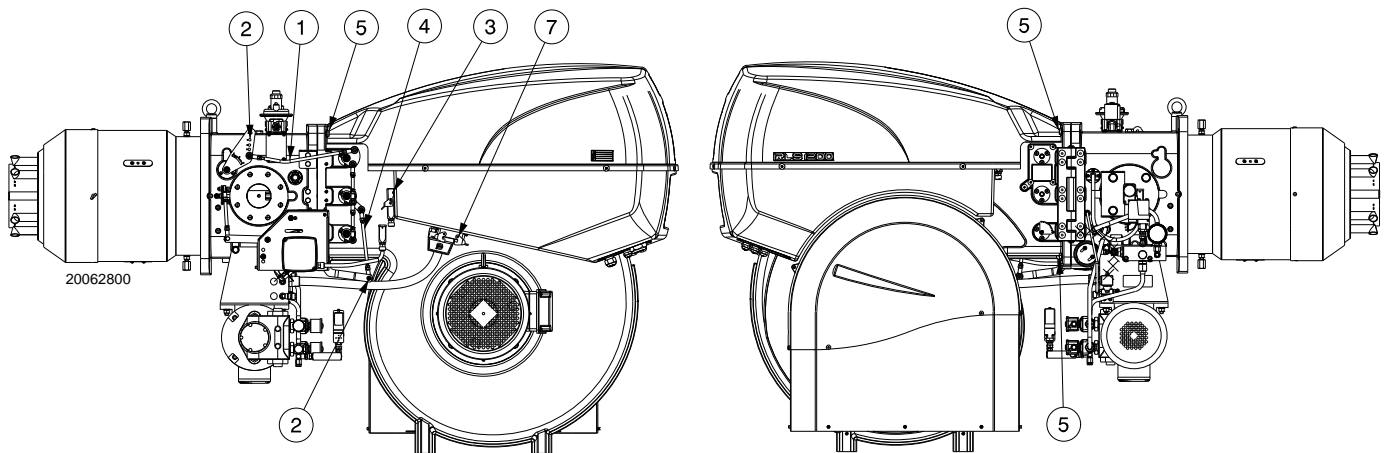


Fig. 44

7.4 Closing the burner

Refit following the steps described but in reverse order; refit all burner components as they were originally assembled.



After carrying out maintenance, cleaning or checking operations, reassemble the hood and all the safety and protection devices of the burner.

8 Faults - Possible causes - Solutions

Find a list of faults, causes and possible solutions for a set of failures that may occur and result in irregular burner operation or no functioning at all.

If a burner malfunction is detected, first of all:

- check that the electrical wiring is adequately connected;
- check whether fuel is delivered;
- check that every adjustment parameter is adequately set.



In the event the burner stops, in order to prevent any damage to the installation, do not unblock the burner more than twice in a row. If the burner locks out for a third time, contact the customer service.



In the event there are further lockouts or faults with the burner, the maintenance interventions must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

8.1 Light oil operation

| Symbol ⁽¹⁾ | Problem | Possible cause | Recommended remedy |
|---|---|---|--|
| ◀ | The burner does not start | Limiters or safety control device open | Adjust or replace |
| | | Control box lockout | Release |
| | | Fan motor lockout | Release the thermal relay |
| | | Intervention of maximum oil pressure switch | Adjust the pressure switch or eliminate overpressure |
| | | No electrical power supply | Close all switches - check connections |
| | | No light oil | Check the light oil supply circuit |
| | | Control box fuse interrupted | Replace |
| | | Pump is jammed | Replace |
| | | Faulty motor remote control switch | Replace |
| | | Defective control box | Replace |
| | | Faulty electrical motor | Replace |
| | | The pilot burner does not work | Check |
| | | Defective safety solenoid valve | Replace |
| | Faulty oil modulator | Recondition or replace it | |
| | The burner does not switch on, and the lock-out appears | Flame simulation | Replace the control box |
| Photocell short-circuit | | Replace photocell | |
| Two-phase electrical supply, thermal relay steps in | | Reset the thermal relay at return of the three phases | |
| ▲ | The burner starts but stops at maximum air damper setting | Contact 1 of the servomotor terminals 9-8 control box does not intervene | Adjust cam I or replace servomotor |
| P | The burner switches on, but then stops in lockout | Air pressure switch incorrectly adjusted | Adjust it |
| | | Pressure switch pressure point pipe blocked | Clean |
| ■ | The burner switches on, but then stops in lockout | Failure to the flame detection circuit | Replace control box |
| ▼ | The burner remains in pre-purging phase | Contact III of the servomotor terminals 10-8 control box does not intervene | Adjust cam III or replace servomotor |

| Symbol ⁽¹⁾ | Problem | Possible cause | Recommended remedy |
|---|---|---|---|
| 1 | Once the pre-purging and the safety time has elapsed the burner goes into lockout without the flame appearing | The VP1 solenoid lets too little gas through | Increase |
| | | The solenoid VP1 or VP2 does not open | Replace the coil or the rectifier panel |
| | | No fuel in the tank, or water on the bottom | Refill with fuel, or remove the water |
| | | Bad head and damper adjustments | Adjust |
| | | Faulty or grounded high voltage cable | Replace |
| | | High voltage cable deformed by high temperature | Replace and protect |
| | | Bad electrical wiring on valves or transformer | Check |
| | | Pump unprimed | Prime it |
| | | Pump suction line connected to return line | Correct connection |
| | | Soiled filters (nozzle line) | Clean |
| | | The valves upstream from the pump are closed | Open them |
| | | Opposite motor rotation | Change electrical wiring to the motor |
| | | Light oil solenoids do not open | Check connections and solenoids |
| | | Nozzle clogged, soiled or deformed | Clean it or replace it |
| | | Pilot burner does not work | Check |
| | | Defective control box | Replace |
| | | Ignition electrode incorrectly adjusted | Adjust it |
| | | Electrode grounded due to broken insulation | Replace |
| | Motor/pump coupling broken | Replace | |
| | Faulty ignition transformer | Replace | |
| The flame ignites regularly but the burner goes into lock out at the end of the safety time | Faulty photocell or control box | Replace photocell or control box | |
| | Soiled photocell | Clean | |
| Smoke in flame (dark Bacharach) | Little air | Adjust the fan head and damper | |
| | Incorrect pump pressure | Adjust | |
| | Nozzle filter clogged | Clean or replace | |
| | Insufficient boiler room ventilation openings | Increase | |
| | Dirty or worn nozzle | Replace | |
| | Flame disk soiled, loose or deformed | Clean it, tighten it or replace it | |
| Smoke in flame (yellow Bacharach) | Excessive air | Adjust head and air dampers | |
| Ignition with pulses or flame failure, delayed ignition | Poorly adjusted head | Adjust | |
| | Incorrectly adjusted fan air damper: too much air | Adjust | |
| | Nozzle not fit for burner or boiler | See the nozzle table | |
| | Faulty nozzle | Replace | |
| | Unsuitable pump pressure | Adjust | |
| | Ignition electrode not adjusted correctly or soiled | Adjust it | |
| | Output during ionisation phase is too high | Reduce | |
| The burner does not pass to 2° stage | Remote control device TR fails to close | Adjust or replace | |
| | Defective control box | Replace | |
| Uneven fuel supply | Understand whether the cause lies in the pump or the fuel supply system | Supply fuel to the burner from a tank positioned near the burner itself | |
| Internally rusted pump | Water in the tank | Remove the water with a pump | |

| Symbol ⁽¹⁾ | Problem | Possible cause | Recommended remedy |
|-----------------------|---|---|---|
| | Noisy pump, unstable pressure | Air in the suction line | Block the couplings |
| | | Depression value too high (higher than 35 cm Hg): | |
| | | Excessive difference of level between burner and tank | Power the burner from a loop circuit |
| | | Piping diameter too small | Increase |
| | | Dirty suction line filters | Clean |
| | | Suction line valves closed | Open them |
| | | The paraffin solidifies due to the low temperature | Put additive in the light oil |
| | Pump unprimes after prolonged pause | Return pipeline not immersed in the fuel | Bring it to the same height as the suction line |
| | | Air in the suction line | Block the couplings |
| | Pump leaks light oil | Loss of sealing organ | Replace the pump |
| | Dirty combustion head | Dirty nozzle or nozzle filter | Replace |
| | | Unsuitable nozzle delivery or angle | See recommended nozzles |
| | | Loose nozzle | Block it |
| | | Environmental impurities on flame stability disc | Clean |
| | | Incorrect head adjustment, or little air | Adjust it, opening the damper |
| | | Blast tube length not suitable for the boiler | Contact the boiler manufacturer |
| I | Burner goes into lockout during operation | Photocell faulty or soiled | Replace it or clean it |
| | | Air pressure switch faulty | Replace |

Tab. O

- (1) The control box has a disc that turns during the start-up program, visible from the reset sight window. When the burner does not start or stops, due to a failure, the symbol that appears on the sight window indicates the type of interruption.

8.2 Gas operation

| Symbol ⁽¹⁾ | Problem | Possible cause | Recommended remedy |
|-----------------------|--|---|--|
| ◀ | The burner does not start | No electrical power supply | Close all switches and check connections |
| | | A limit or safety thermostat/pressure switch open | Adjust or replace |
| | | Control box lockout | Release the control box |
| | | Control box fuse interrupted | Replace it ⁽²⁾ |
| | | Incorrect electrical wiring | Check |
| | | Defective control box | Replace |
| | | No gas supply | Open the manual valves between meter and train |
| | | Mains gas pressure insufficient | Contact your GAS COMPANY |
| | | Minimum gas pressure switch fails to close | Adjust or replace |
| | | Air pressure switch in operating position | Adjust or replace |
| | | The servomotor contact does not intervene (closure cam 0°) | Adjust the closure cam 0° or replace the servomotor |
| | The burner does not switch on, and the lock-out appears | Flame simulation | Replace the control box |
| | | Faulty motor remote control switch | Replace |
| | | Defective electrical motor | Replace |
| Motor lockout | | Release the thermal relay | |
| ▲ | The burner starts up but stops at the damper maximum opening | The servomotor contact does not intervene (maximum cam opening) | Cam adjustment (maximum opening) or replace the servomotor |
| P | The burner starts and then goes into lockout | Air pressure switch inoperative due to insufficient air pressure: | |
| | | Air pressure switch poorly adjusted | Adjust or replace |
| | | Pressure switch pressure point pipe blocked | Clean |
| | | Poorly adjusted head | Adjust |
| | | Dirty fan | Clean |
| | High depression in the furnace | Contact our Technical Department | |
| ■ | The burner turns on and then remains in lockout mode | Failure to the flame detection circuit | Replace the control box |
| ▼ | The burner remains in the pre-purge phase | The servomotor contact does not intervene (cam minimum) | Cam adjustment (minimum) or replace the servomotor |

| Symbol ⁽¹⁾ | Problem | Possible cause | Recommended remedy |
|--|---|--|---|
| 1 | Once the pre-purging and the safety time has elapsed the burner goes into lockout without the flame appearing | The VP1 solenoid lets too little gas through | Increase |
| | | The solenoid VP1 or VP2 does not open | Replace the coil or the rectifier panel |
| | | Gas pressure too low | Increase pressure at governor |
| | | Ignition electrode incorrectly adjusted | Adjust it |
| | | Electrode grounded due to broken insulation | Replace |
| | | Faulty or grounded high voltage cable | Replace |
| | | High voltage cable deformed by high temperature | Replace and protect |
| | | Faulty ignition transformer | Replace |
| | | Incorrect valve or ignition transformer connections | Redo them |
| | | Defective control box | Replace |
| | | A closed valve upline the gas train | Open |
| | Air in pipework | Bleed air | |
| | Lockout with flame appearing | The VP1 or VP2 solenoids let too little gas through | Increase |
| | | Dirty flame sensor | Check, replace flame sensor |
| Faulty connection | | Check, replace flame sensor | |
| Insufficient detection current (min.70 µA) | | Measure current, replace flame sensor | |
| Flame sensor exhausted, faulty | | Replace | |
| Maximum gas pressure switch intervention | | Adjust or replace | |
| Defective control box | Replace | | |
| | The burner continues to repeat the start-up cycle, without lockout | The gas pressure in the gas mains lies very close to the value to which the minimum gas pressure switch has been set. The sudden drop in pressure after valve opening causes temporary opening of the pressure switch itself, the valve immediately closes and the burner comes to a halt. Pressure increases again, the pressure switch closes again and the ignition cycle is repeated. The sequence repeats endlessly. | Reduce the minimum gas pressure switch intervention pressure. Replace the gas filter cartridge |
| | Lockout without symbol indication | Flame simulation | Replace the control box |
| | Burner goes into lockout during operation | Faulty flame sensor | Replace worn parts |
| | | Air pressure switch faulty | Replace |
| | | Maximum gas pressure switch intervention | Adjust or replace |
| ◀ | Lockout when the burner stops | Permanent flame in the combustion head or flame simulation | Eliminate permanency of flame or replace the control box |
| | Ignition with pulsations | Poorly adjusted head | Adjust |
| | | Ignition electrode incorrectly adjusted | Adjust it |
| | | Incorrectly adjusted fan air damper: too much air | Adjust |
| | | Output during ionisation phase is too high | Reduce |

Tab. P

(1) The control box has a disc that turns during the start-up program, visible from the reset sight window. When the burner does not start or stops, due to a failure, the symbol that appears on the sight window indicates the type of interruption.

(2) The fuse is in the rear part of the control box. A spare fuse is also available: it can be extracted after breaking the panel tab that houses it.

A Appendix - Accessories**Output power regulator kit for modulating operation**

With the modulating operation, the burner continually adapts the power to the heat request, ensuring a high level of stability for the parameter controlled: temperature or pressure.

Two components should be ordered:

- the output power regulator to be installed on the burner;
- the probe to be installed on the heat generator.

| Parameter to be checked | | Probe | | Output regulator | |
|-------------------------|------------------|--------------|---------|------------------|---------|
| | Adjustment field | Type | Code | Type | Code |
| Temperature | - 100...+ 500°C | PT 100 | 3010110 | RWF40 BASIC | 3010356 |
| Pressure | 0...2.5 bar | Output probe | 3010213 | RWF40 HIGH | 3010357 |
| | 0...16 bar | 4...20mA | 3010214 | | |

Output power regulator kit with signal 4-20 mA, 0-10V

Two components should be ordered:

- the analogue signal converter
- the potentiometer

| Burner | Potentiometer | | Analogue Signal Converter | |
|----------------|---------------|---------|---------------------------|---------|
| | Type | Code | Type | Code |
| RLS 1000/M C13 | ASZ... | 3013532 | E5202 | 3010390 |
| RLS 1200/M C13 | | | | |

Soundproofing box kit

| Burner | Code |
|----------------|---------|
| RLS 1000/M C13 | 3010401 |
| RLS 1200/M C13 | |

Kit for the remote selection of the fuel

| Burner | Code |
|----------------|---------|
| RLS 1000/M C13 | 3010372 |
| RLS 1200/M C13 | |


Gas trains in compliance with EN 676


Please refer to manual.

B Appendix - Electrical panel layout

| | |
|-----------|---|
| 1 | Index of layouts |
| 2 | Indication of references |
| 3 | Single-wire output layout |
| 4 | Functional layout star/triangle starter |
| 5 | Functional layout LFL 1... |
| 6 | Functional layout LFL 1... |
| 7 | Functional layout LFL 1... |
| 8 | Functional layout LFL 1... |
| 9 | Functional diagram |
| 10 | Electrical wiring that the installer is responsible for |
| 11 | Electrical wiring that the installer is responsible for |
| 12 | Electrical wiring kit RWF40 internal |
| 13 | Electrical wiring kit RWF40 external |


2 Indication of references

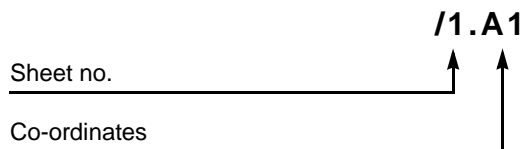

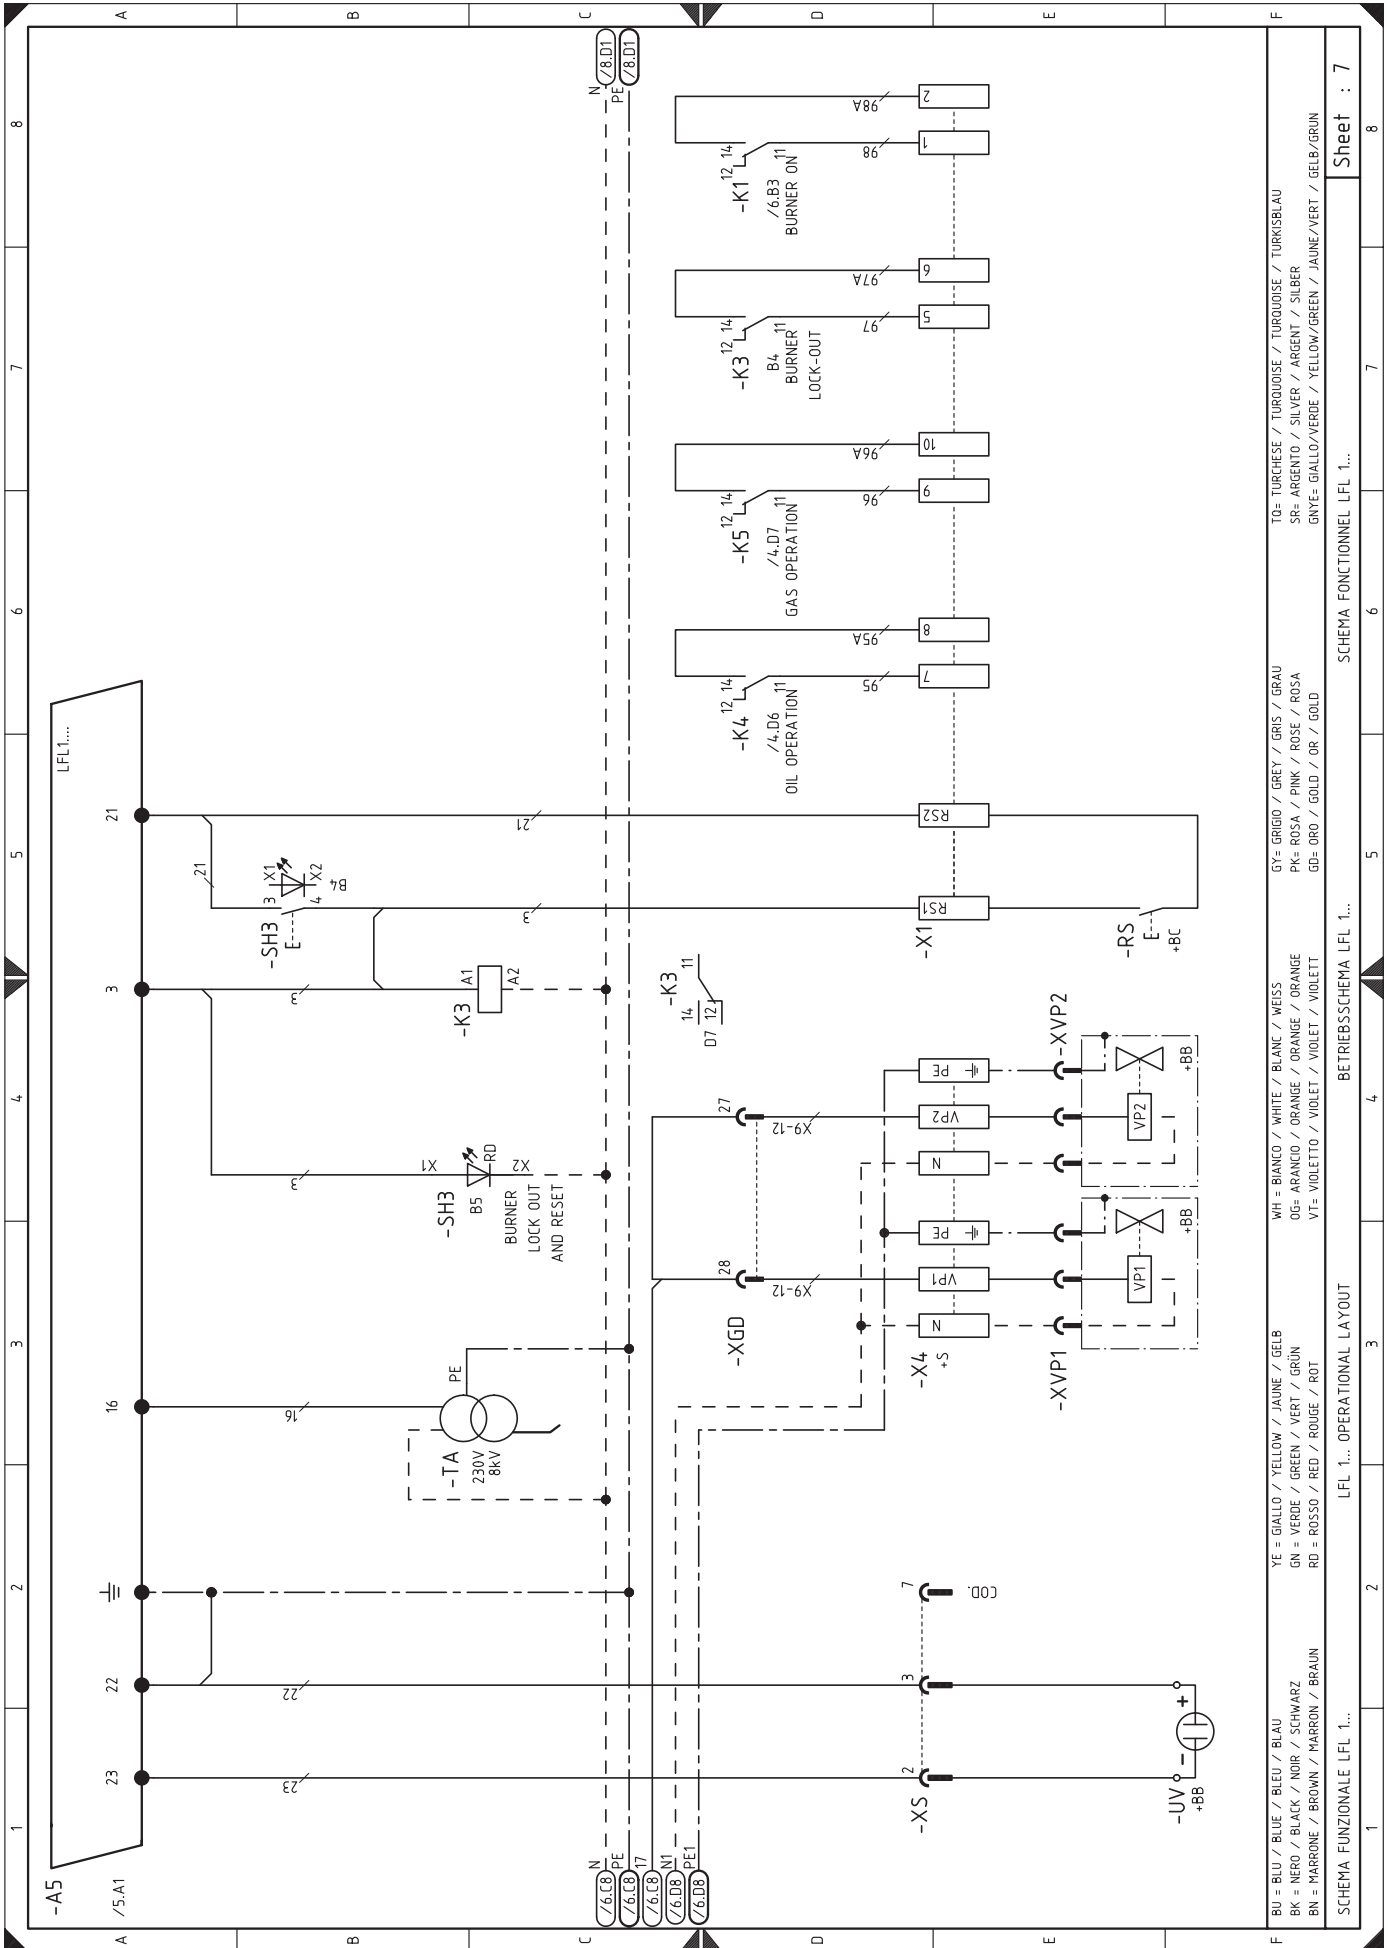

BU = BILU / BLUE / BLEU / BLAU
 BK = NERO / BLACK / NOIR / SCHWARZ
 BN = MARRONE / BROWN / MARRON / BRAUN
 YE = GIALLO / YELLOW / JAUNE / GELB
 GN = VERDE / GREEN / VERT / GRÜN
 RD = ROSSO / RED / ROUGE / ROT
 WH = BIANCO / WHITE / BLANC / WEISS
 OG = ARANCIO / ORANGE / ORANGE / ORANGE
 VT = VIOLETTO / VIOLET / VIOLET / VIOLETT
 GR = GRIGIO / GREY / GRIS / GRAU
 PK = ROSA / PINK / ROSE / ROSA
 GB = ORO / GOLD / OR / GOLD
 TO = TURCHESE / TURQUOISE / TURQUOISE / TURKISBLAU
 SR = ARGENTO / SILVER / ARGENT / SILBER
 GNVE = GIALLO/VERDE / YELLOW/GREEN / JAUNE/VERT / GELB/GRÜN

SCHEMA FUNZIONALE LFL 1...
 LFL 1... OPERATIONAL LAYOUT
 BETRIEBSSCHHEMA LFL 1...
 SCHEMA FONCTIONNEL LFL 1...
 Sheet : 7

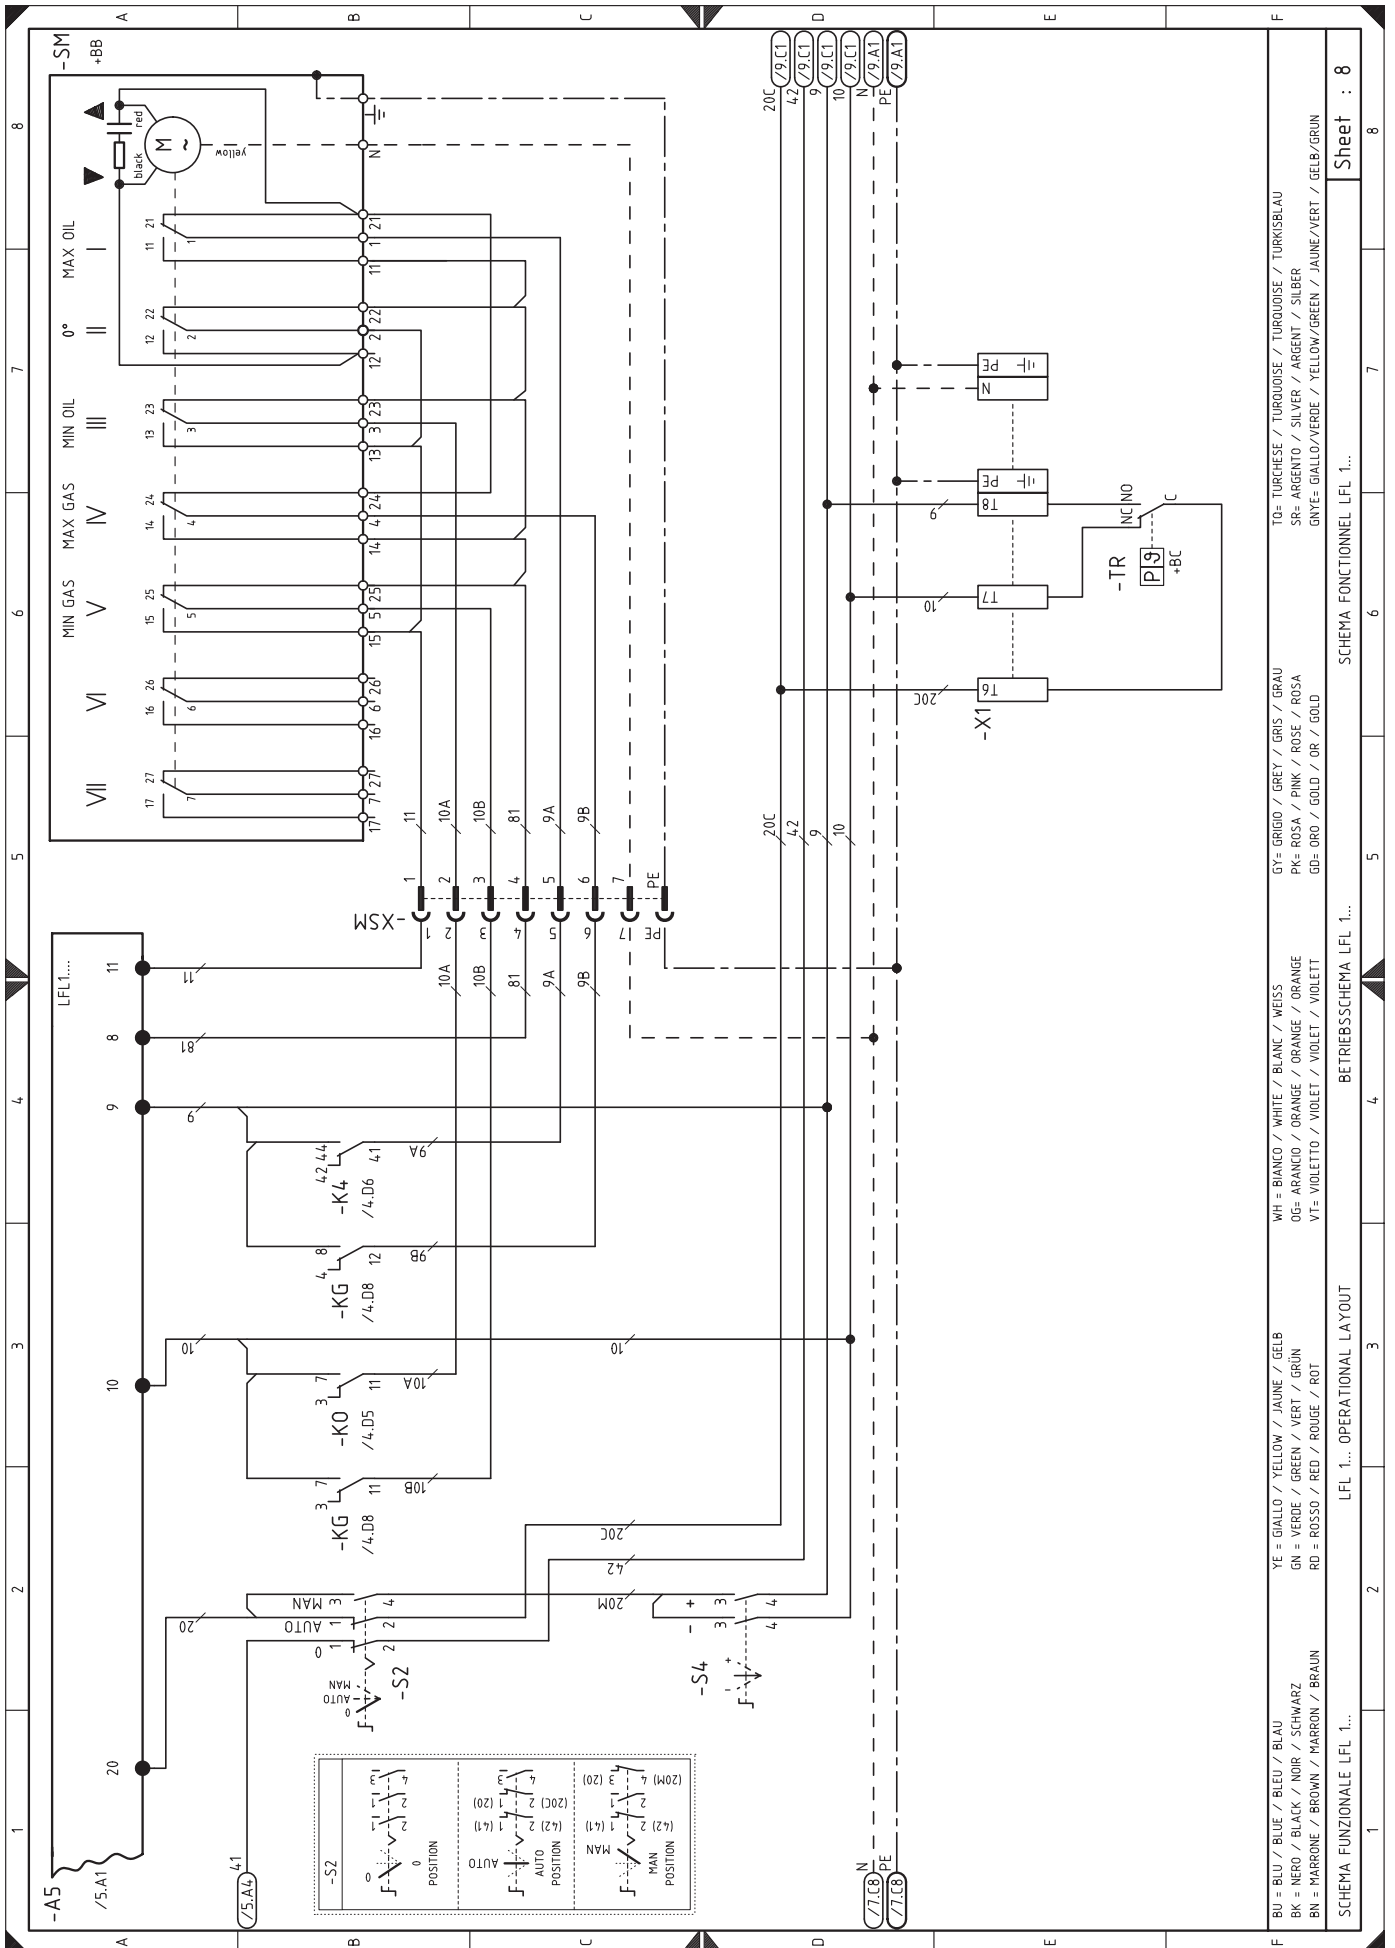


Sheet : 8


SCHEMA FONCTIONNEL LFL 1...

BETRIEBSSCHEMA LFL 1...

LFL 1... OPERATIONAL LAYOUT

SCHEMA FUNZIONALE LFL 1...

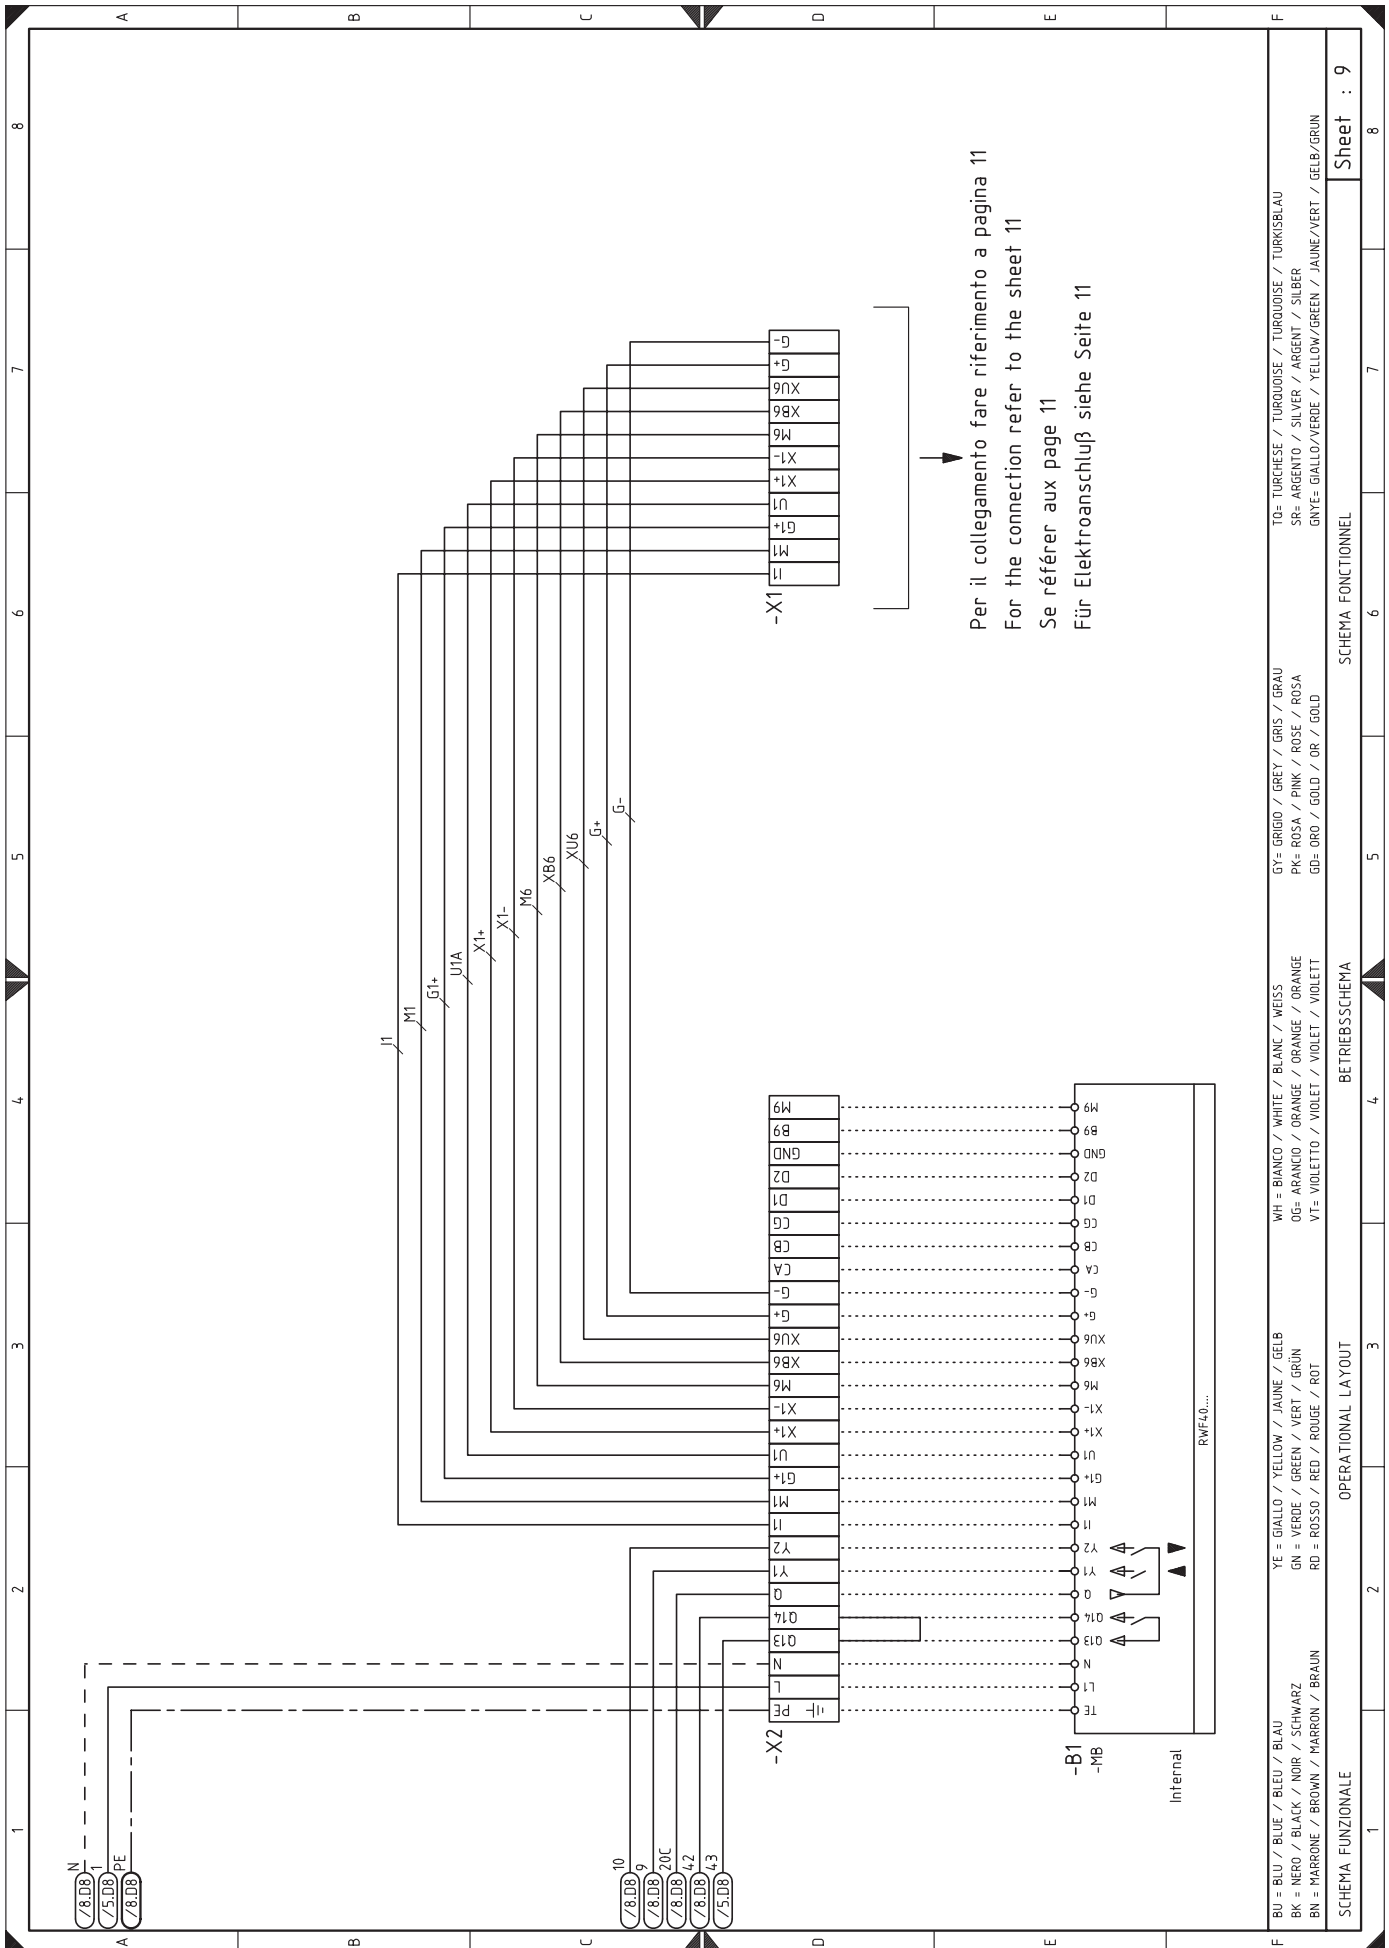

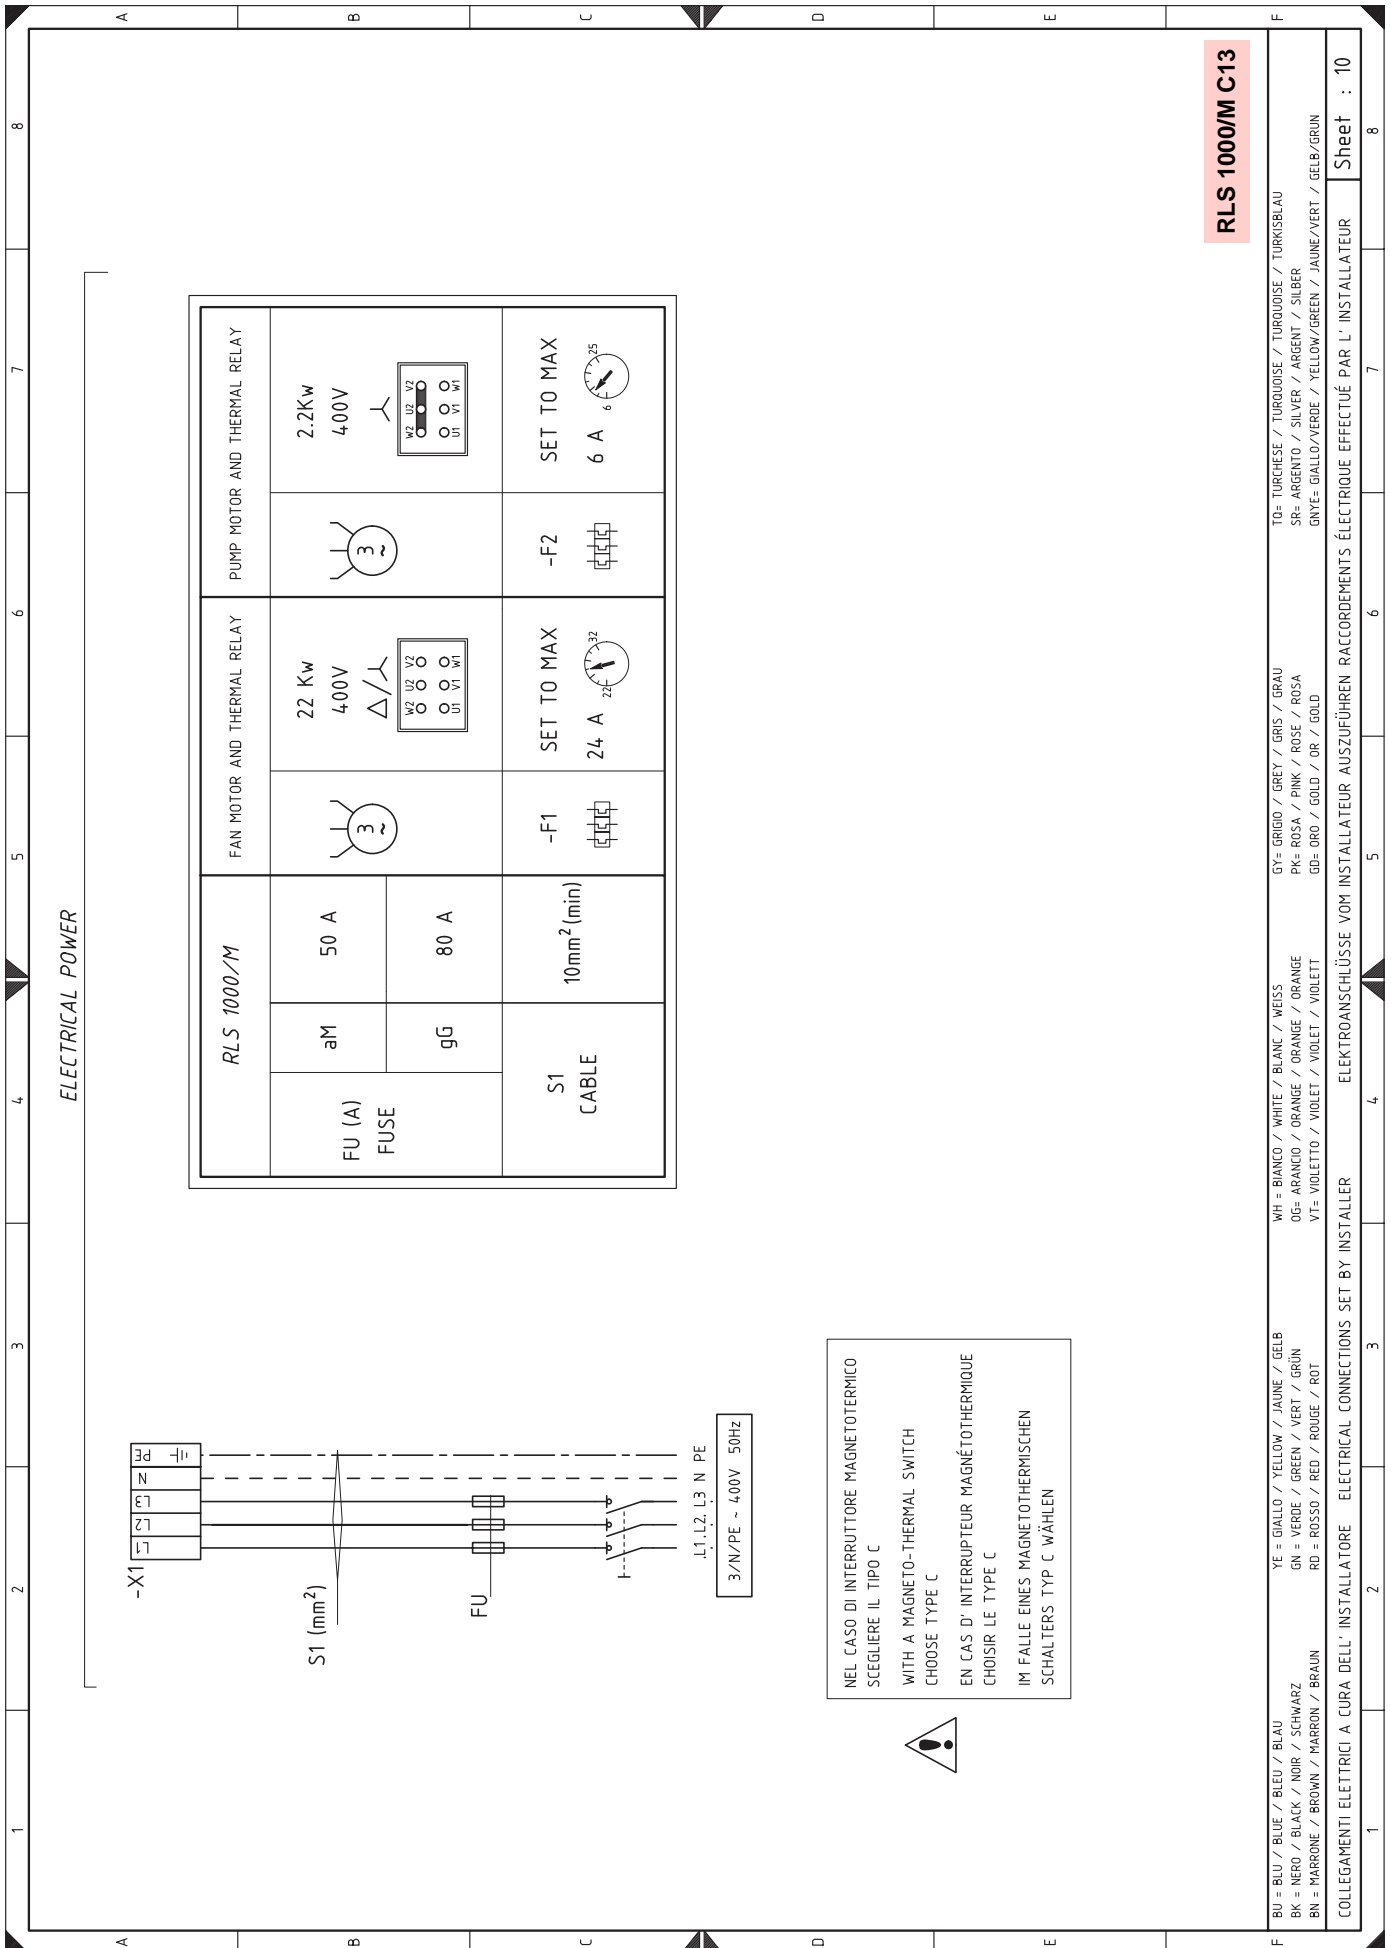



RLS 1000/M C13

| | | | | | |
|---------------------------------------|-------------------------------------|---|----------------------------------|---|--|
| FU = BLU / BLUE / BLEU / BLAU | YE = GIALLO / YELLOW / JAUNE / GELB | WH = BIANCO / WHITE / BLANC / WEISS | GY = GRIGIO / GREY / GRIS / GRAU | TO = TURCHESE / TURQUOISE / TURKOISE / TURKISBLAU | |
| BK = NERO / BLACK / NOIR / SCHWARZ | GN = VERDE / GREEN / VERT / GRÜN | OG = ARANCIO / ORANGE / ORANGE / ROSA | PK = ROSA / PINK / ROSE / ROSA | SR = ARGENTO / SILVER / ARGENT / SILBER | |
| BN = MARRONE / BROWN / MARRON / BRAUN | RD = ROSSO / RED / ROUGE / ROT | VI = VIOLETTA / VIOLET / VIOLET / VIOLETT | GD = ORO / GOLD / OR / GOLD | GNVE = GIALLO/VERDE / YELLOW/GREEN / JAUNE/VERT / GELB/GRÜN | |

COLLEGAMENTI ELETTRICI A CURA DELL'INSTALLATORE ELECTRICAL CONNECTIONS SET BY INSTALLER ELEKTROANSCHLÜSSE VOM INSTALLATEUR AUSZUFÜHREN RACCORDEMENTS ÉLECTRIQUE EFFECTUÉ PAR L'INSTALLATEUR

Sheet : 10

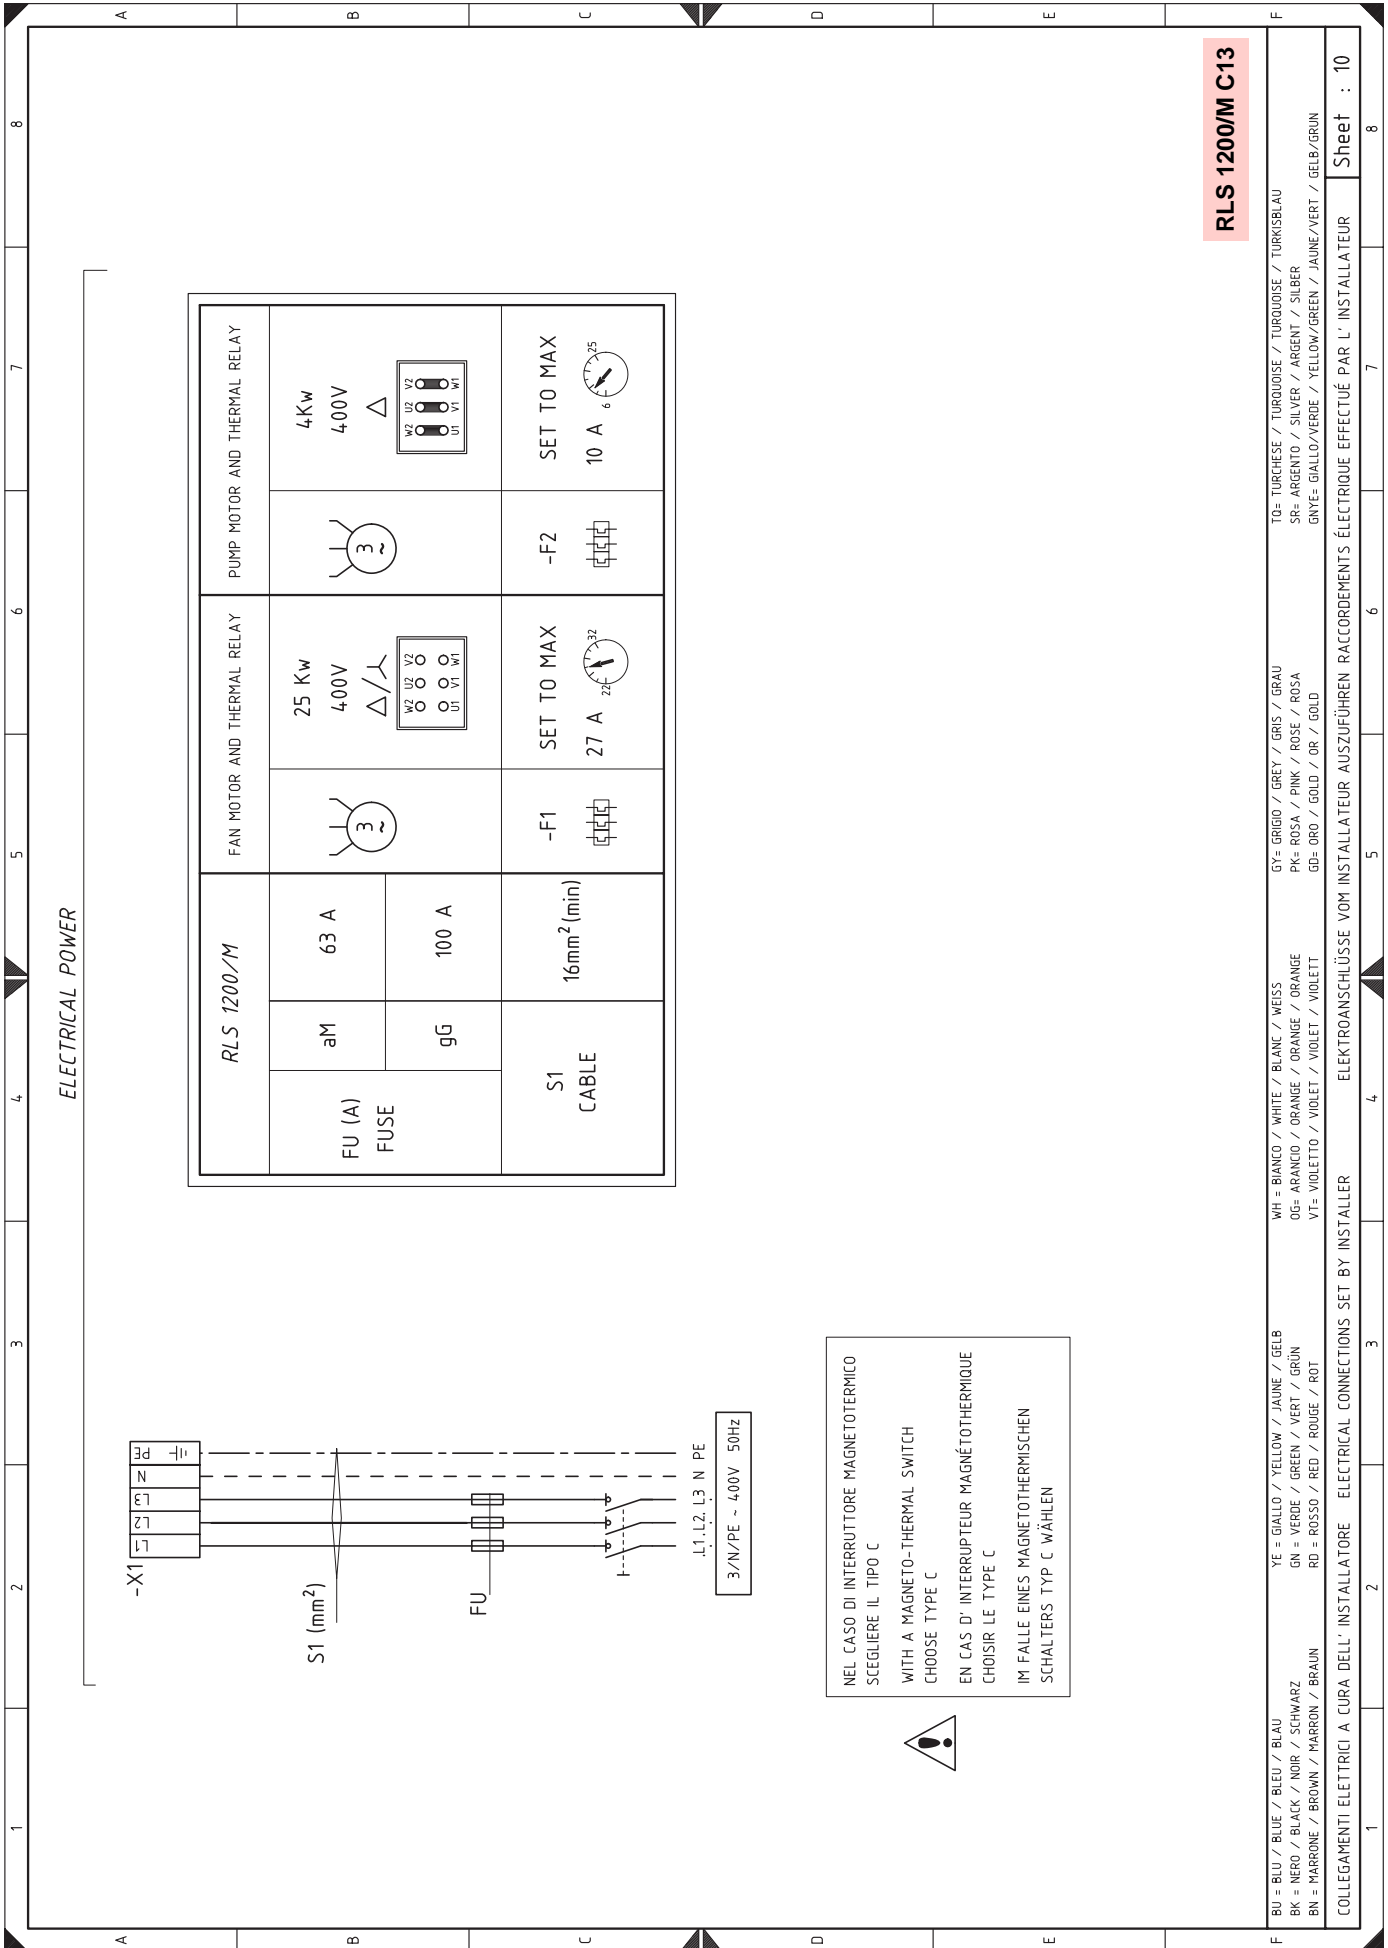

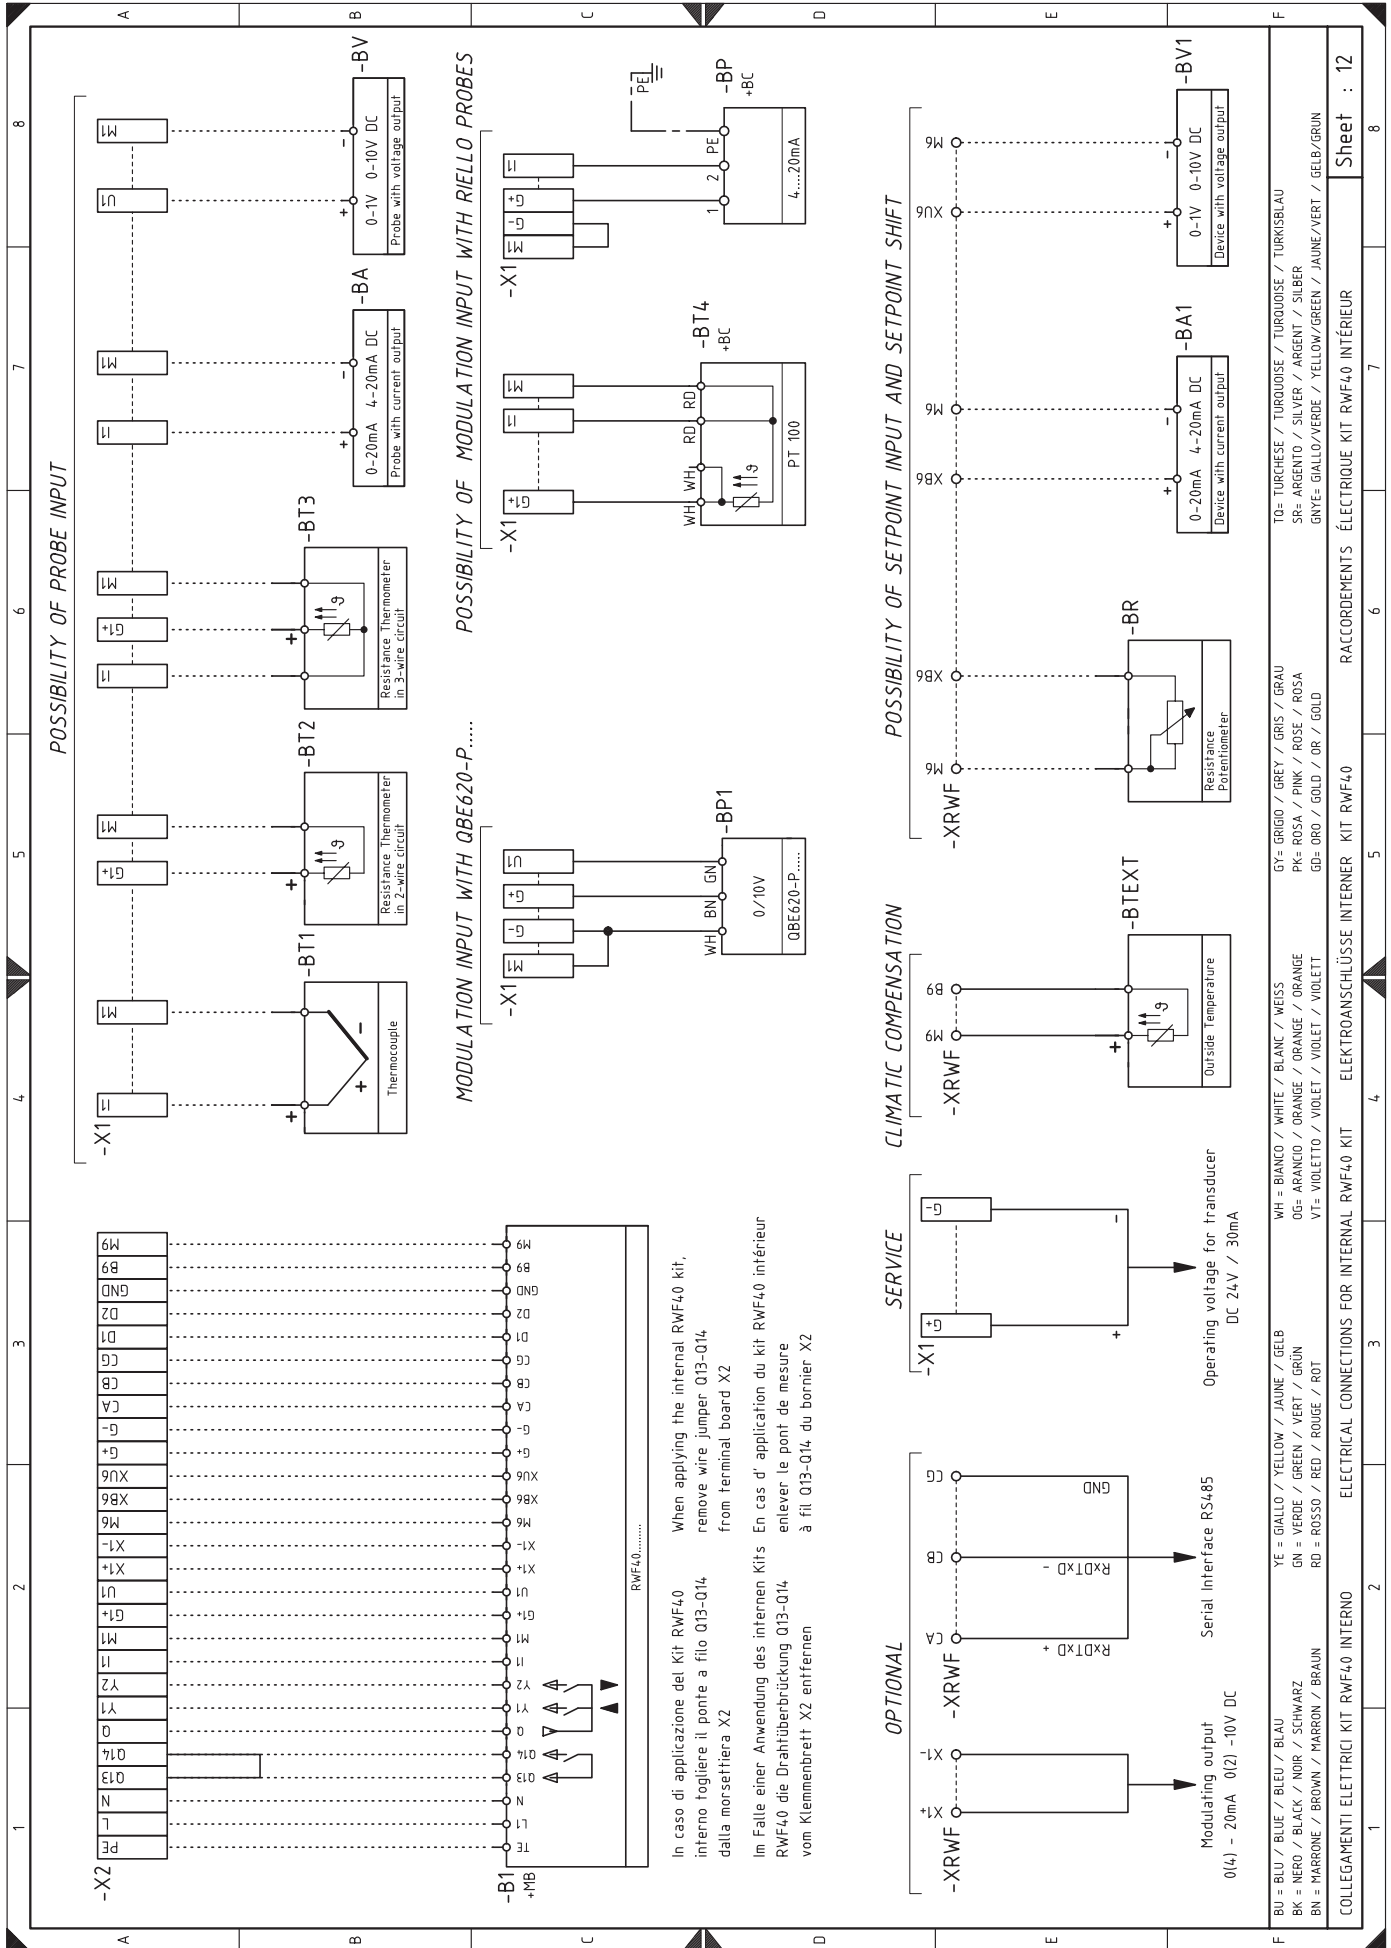

Wiring layout key

| | | | |
|-------|--|------|--|
| A5 | Control box | XAUX | Auxiliary terminal board |
| B1 | Output regulator RWF40 internal | XGD | Derivation unit connector |
| B2 | Output regulator RWF40 external | XPGM | Maximum gas pressure switch connector |
| BA | Probe with output under current | XPO | Oil pressure switch connector |
| BA1 | Device with output undercurrent, for modifying remote setpoint | XPO1 | Oil return pressure switch connector |
| BP | Pressure probe | XS | Flame sensors connector |
| BP1 | Pressure probe | XSM | Servomotor connector |
| BR | Remote setpoint potentiometer | XVP1 | pilot valve 1 connector |
| BT1 | Thermocouple probe | XVP2 | pilot valve 2 connector |
| BT2 | Probe Pt100, 2 wires | XVU | Nozzle valve connector |
| BT3 | Probe Pt100, 3 wires | Y | Gas regulator valve + gas safety valve |
| BT4 | Probe Pt100, 3 wires | YVPS | Valve leak detection device |
| BTEXT | External probe for climatic compensation of the setpoint | | |
| BV | Output probe in voltage | | |
| BV1 | Output device in voltage to modify remote setpoint | | |
| F1 | Fan motor thermal relay | | |
| F2 | Pump motor thermal relay | | |
| F3 | Auxiliary fuse | | |
| H1 | Light signalling burner on | | |
| H2 | Light signalling fan motor and pump motor lockout | | |
| H3 | Heat request lighting signal | | |
| H4 | Burner working lighting signal | | |
| KL1 | Star/triangle starter line contactor and direct start-up | | |
| KMP | Pump motor contact maker | | |
| KT1 | Star/triangle starter triangle contactor | | |
| KS1 | Start/triangle starter star contactor | | |
| KST1 | Star/triangle starter timer | | |
| K1 | Clean contacts output relay burner switched on | | |
| K3 | Clean contacts output relay for burner lockout | | |
| K4 | Output relay for light oil operation clean contacts | | |
| K5 | Output relay for gas operation clean contacts | | |
| KG | Gas operation relay | | |
| KO | Light oil operation relay | | |
| MP | Pump motor | | |
| MV | Fan motor | | |
| PA | Air pressure switch | | |
| PE | Burner earth | | |
| PGM | Maximum gas pressure switch | | |
| PGMin | Minimum gas pressure switch | | |
| PO | Oil pressure switch | | |
| PO1 | Maximum oil pressure switch on return line | | |
| RS | Remote burner reset button | | |
| S1 | Emergency stop button | | |
| S2 | Off / automatic / manual selector | | |
| S4 | Power increase / power reduction selector | | |
| S5 | Fuel selector and enable signal to remote fuel selector | | |
| SH3 | Burner reset button and lockout signal | | |
| SM | Servomotor | | |
| SV | External safety valve | | |
| TA | Ignition transformer | | |
| TL | Limit thermostat/pressure switch | | |
| TR | Adjustment thermostat/pressure switch | | |
| TS | Safety thermostat/pressure switch | | |
| UV | Flame sensor | | |
| VF | Light oil operation valve | | |
| VP1 | Pilot valve 1 | | |
| VP2 | Pilot valve 2 | | |
| VR | Light oil return valve | | |
| VR1 | Light oil return valve | | |
| VS | Safety light oil valve | | |
| VU | Nozzle valve | | |
| X1 | Main terminal supply board | | |
| X2 | Terminal board for kit RWF40 | | |
| X4 | Light oil unit terminal board | | |

RIELLO

RIELLO S.p.A.
I-37045 Legnago (VR)
Tel.: +39.0442.630111
[http:// www.riello.it](http://www.riello.it)
[http:// www.rielloburners.com](http://www.rielloburners.com)